
## TRANSDUCER ALTER 04BL

## 1. COMPONENT REQUIREMENTS

|    | TYPE                          | unit             | ST-04BL              |
|----|-------------------------------|------------------|----------------------|
| 1  | RATED VOLTAGE                 | (V)              | 3.6                  |
| 2  | OPERATING VOLTAGE             | (V)              | 2-4                  |
| 3  | CURRENT CONSUMPTION           | (mA)             | MAX. 70              |
| 4  | COIL RESISTANCE               | ( <u>\lambda</u> | 15 3 <u>+</u>        |
| 5  | SOUND OUTPUT Distance at 5 cm | (dB)             | MIN.100(Typical 102) |
| 6  | RESONANCE FREQUENCY           | (Hz)             | 2300                 |
| 7  | OPERATING TEMP.               | (°C)             | -30 ∼+85             |
| 8  | STORAGE TEMP.                 | (°C)             | -40 ~·+85            |
| 9  | WEIGHT                        | (g)              | 1                    |
| 10 | TERMINAL                      |                  | SMD TYPE             |
| 11 | DIMENSION                     | mm               | L8.5 X W8.5 XH4.0    |

## 2. TEST CONFIGURATIONS

- Alert Tone Waveform
- The ETACS alert tone will switch between two frequencies in 30 ms for a duration 0.4 sec also in the form of a square wave with a 50% duty cycle. It is off for 0.2 sec before alerting again.
- GSM Alert Tone: Switches between 2 frequencies in 32 ms increments for 1 second.
  Then the signal is off for 4 sec. after which the cycle repeats.
  The frequencies are square waves each with a 50% duty cycle.

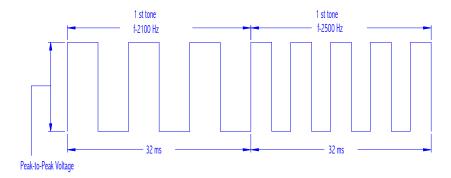

## 3.TEST FIXTURE

