# USER'S GUIDE

LSI21040 PCI to Dual Channel Ultra160 SCSI Host Adapter

Version 1.1

November 2000





CE

#### **Electromagnetic Compatibility Notices**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables for SCSI connection external to the cabinet are used in the compliance testing of this Product. LSI Logic is not responsible for any radio or television interference caused by unauthorized modification of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by LSI Logic. The correction of interferences caused by such unauthorized modification, substitution, or attachment will be the responsibility of the user.

The LSI Logic LSI21040 is tested to comply with FCC standards for home or office use.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

LSI Logic Corporation North American Headquarters Milpitas, CA 408.433.8000

ii

This document contains proprietary information of LSI Logic Corporation. The information contained herein is not to be used by or disclosed to third parties without the express written permission of an officer of LSI Logic Corporation.

LSI Logic products are not intended for use in life-support appliances, devices, or systems. Use of any LSI Logic product in such applications without written consent of the appropriate LSI Logic officer is prohibited.

Document DB15-000148-02, Second Edition (November 2000). This document describes the LSI Logic LSI21040 PCI to Dual Channel Ultra160 SCSI Host Adapter and will remain the official reference source for all revisions/releases of this product until rescinded by an update.

#### To receive product literature, visit us at http://www.lsilogic.com.

LSI Logic Corporation reserves the right to make changes to any products herein at any time without notice. LSI Logic does not assume any responsibility or liability arising out of the application or use of any product described herein, except as expressly agreed to in writing by LSI Logic; nor does the purchase or use of a product from LSI Logic convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of LSI Logic or third parties.

Copyright © 2000 by LSI Logic Corporation. All rights reserved.

#### TRADEMARK ACKNOWLEDGMENT

The LSI Logic logo design, SDMS, SCRIPTS, SURElink, TolerANT, and LVD Link are registered trademarks or trademarks of LSI Logic Corporation. All other brand and product names may be trademarks of their respective companies.

# **Preface**

This book is the primary reference and user's guide for the LSI Logic LSI21040 PCI to Dual Channel Ultra160 SCSI Host Adapter. It contains a complete functional description for the LSI21040 as well as complete physical and electrical specifications.

#### **Audience**

This document assumes that you have some familiarity with SCSI protocol and related support devices and will benefit persons installing and using the LSI21040.

#### Organization

This document has the following chapters and appendix:

- Chapter 1, Using the LSI21040, defines the interfaces and characteristics of the LSI21040.
- Chapter 2, Installing the LSI21040, provides both quick and detailed installation instructions.
- Chapter 3, Specifying the Technical Characteristics, describes the physical and operational environments of the LSI21040.
- Appendix A, Glossary of Terms and Abbreviations, provides definitions of various terminology that is referenced throughout this user's guide.

Preface

#### **Related Publications**

PCI Storage Device Management System SDMS™ 4.0 User's Guide, Order Number S14007.A

SCSI SCRIPTS Processors Programming Guide, Order Number \$14044.A

LSI53C1010-33 PCI to Dual Channel Ultra3 SCSI Multifunction Controller Technical Manual, Order Number S14025.C

#### **Revision Record**

Revision	Date	Remarks	
1.0	5/00	Final version.	
1.1	11/00	All product names changed from SYM to LSI.	

# **Contents**

Chapter 1	Usin	g the LSI21	040	
	1.1	General D	escription	1-1
	1.2	Features		1-2
		1.2.1 F	PCI Interface	1-2
		1.2.2	SCSI Interface	1-3
		1.2.3 E	Board Characteristics	1-4
		1.2.4	SCSI Bus Activity LED Connector	1-4
	1.3	Benefits o	f Ultra160 SCSI	1-5
		1.3.1	Double Transition (DT) Clocking	1-5
		1.3.2	Cyclic Redundancy Check (CRC)	1-5
		1.3.3	Domain Validation	1-5
		1.3.4	Asynchronous Information Protection (AIP)	1-6
	1.4	Benefits o	f LVD Link Technology	1-6
	1.5	Benefits o	f TolerANT <sup>®</sup> Technology	1-6
	1.6	Benefits o	f SURElink (Extended Domain Validation)	1-7
Chapter 2	Insta	Iling the LS	SI21040	
	2.1	Quick Inst	allation Procedure	2-1
	2.2	Detailed In	nstallation Procedure	2-2
		2.2.1 E	Before You Start	2-2
		2.2.2 I	nserting the Host Adapter	2-2
		2.2.3	Connecting the SCSI Peripherals	2-6
		2.2.4	Making Internal SCSI Bus Connections	2-9
		2.2.5	Making External SCSI Bus Connections	2-14
		2.2.6	SCSI Bus Termination	2-17
		2.2.7	Setting SCSI IDs	2-23
	2.3	Completin	g the Installation	2-25
	2.4	Troublesh	poting	2-26

Contents vii

Chapter 3	Specifying the Technical Characteristics					
	3.1	Physical	Environment	3-1		
		3.1.1	Physical Characteristics	3-1		
		3.1.2	Electrical Characteristics	3-2		
		3.1.3	Thermal, Atmospheric Characteristics	3-3		
		3.1.4	Electromagnetic Compliance	3-3		
		3.1.5	Safety Characteristics	3-3		
	3.2	Operation	nal Environment	3-4		
		3.2.1	The PCI Interface	3-4		
		3.2.2	The SCSI Interface	3-7		
		3.2.3	SCSI Activity LED Interface	3-10		
	3.3	Subsyste	m and Subsystem Vendor ID	3-10		
Appendix A	Glossary of Terms and Abbreviations					
	Index					
	Custo	omer Feed	lback			
Figures						
	2.1	Hardwar	e Connections for the LSI21040	2-4		
	2.2	Inserting	the Host Adapter	2-5		
	2.3	SCSI Ca	ables	2-8		
	2.4	Internal	SCSI Ribbon Cable to Host Adapter Connection	2-9		
	2.5	Internal	SCSI Ribbon Cable to Internal SCSI Device			
		Connect	ion	2-10		
	2.6	Connect	ing Additional Internal SCSI Devices	2-11		
	2.7	Multiple	Internal SCSI Devices Chained Together	2-12		
	2.8		D Connector	2-13		
	2.9		Cable to Host Adapter	2-14		
	2.10		SCSI Device Cable	2-15		
	2.11		External SCSI Devices Chained Together	2-16		
	2.12	Internal	SCSI Device Termination	2-19		

	2.13 External SCSI Device Termination		2-20	
	2.14	Internal and External SCSI Device Termination	2-22	
	3.1	LSI21040 Mechanical Drawing	3-2	
Tables				
	2.1	SCSI Bus Widths and Speeds	2-6	
	2.2	SCSI Bus Lengths	2-7	
	2.3	SCSI ID Record	2-24	
	3.1	PCI Connector J1 (Front)	3-5	
	3.2	PCI Connector J1 (Back)	3-6	
	3.7	LED Connector J6	3-10	
	3.8	Subsystem and Subsystem Vendor ID	3-10	

Contents ix

# Chapter 1 Using the LSI21040

This chapter describes the LSI21040 PCI to Ultra160 SCSI Dual Channel Host Adapter interface to PCI computer systems and includes these topics:

- Section 1.1, "General Description," page 1-1
- Section 1.2, "Features," page 1-2
- Section 1.3, "Benefits of Ultra160 SCSI," page 1-5
- Section 1.4, "Benefits of LVD Link Technology," page 1-6
- Section 1.5, "Benefits of TolerANT<sup>®</sup> Technology," page 1-6
- Section 1.6, "Benefits of SURElink (Extended Domain Validation)," page 1-7

# 1.1 General Description

The LSI21040 provides an Ultra160 SCSI interface to PCI computer systems. It is referred to as the LSI21040 throughout this guide. Installing this adapter in your PCI system allows connection of up to 15 SCSI devices per channel. The LSI21040 uses the LSI53C1010 PCI to Ultra160 Multifunction Controller chip.

The dual channel LSI21040 provides 16-bit Low Voltage Differential (LVD) and Single-Ended (SE) SCSI solutions for your computer, using only one PCI slot. This board supports legacy Fast SCSI, Ultra SCSI, Ultra2 SCSI, and the newest Ultra160 SCSI devices.

Channel A supports SE and LVD modes of operation. Channel B supports only the SE mode.

The Storage Device Management System (SDMS<sup>™</sup>) software operates the board. You may also use SCSI software provided by other vendors

that works with the LSI53C1010. The flash memory device on the board can incorporate the BIOS support for this host adapter. The LSI21040 has a serial EEPROM device for storing your SCSI bus configuration.

The LSI53C1010 also contains a SCSI SCRIPTS™ processor that permits both DMA and SCSI commands to be fetched from host memory or internal SCRIPTS RAM. Algorithms written in SCSI SCRIPTS control the actions of the SCSI and DMA cores. The SCRIPTS processor executes complex SCSI bus sequences independently of the host CPU. For more information on the SCSI SCRIPTS Instruction Set used to write these algorithms, refer to the SCSI SCRIPTS Processors Programming Guide.

The PCI Storage Device Management System SDMS 4.0 User's Guide and this user's guide contain a complete library of product information and installation instructions. With this information, the full benefits of your LSI21040 are available to you.

## 1.2 Features

This section provides an overview of the PCI Interface, the SCSI Interface, and Board Characteristics for the LSI21040.

#### 1.2.1 PCI Interface

PCI interfaces I/O components to the processor and memory subsystems in equipment ranging from PCs to servers. The PCI interface operates as a 64-bit DMA bus master capable of 64-bit addressing. The LSI53C1010 contains the PCI functionality for the LSI21040.

The PCI interface includes these features:

- Complies with PCI 2.2 specification
- Complies with PCI Bus Power Management Specification Rev 1.1
- Complies with PC99
- Supports up to 64-bit/33 MHz PCI interface for 264 Mbytes/s bandwidth that:
  - Supports 64-bit DMA bus mastership with 64-bit addressing
  - Operates at 33 MHz

- Supports dual address cycle generation for all SCRIPTS
- Presents a single electrical load to the PCI Bus (True PCI Multifunction Device)
- Bursts 2 to 128 Dwords across the PCI bus
- Supports 32-bit or 64-bit word data bursts with variable burst lengths
- Supports the PCI Cache Line Size register
- Prefetches up to 8 Dwords of SCRIPTS instructions
- Supports PCI Write and Invalidate, Read Line, and Read Multiple commands
- Bursts SCRIPTS opcode fetches across the PCI bus
- Supports universal 3.3 V and 5 V PCI signaling environment

#### 1.2.2 SCSI Interface

The SCSI interface on the LSI21040 operates as an 8-bit or 16-bit interface. It supports 8-bit or 16-bit, synchronous and asynchronous, LVD or SE, Fast, Ultra, Ultra2, and Ultra160 SCSI protocols in various combinations.

The LSI53C1010 contains the SCSI functionality for the LSI21040. This chip is a PCI to Ultra160 SCSI Controller with LVD Link™ Universal Transceivers. It connects directly to the SCSI bus and generates signal timing and bus protocol in compliance with SCSI standards.

The SCSI interface includes these features:

- Performs wide, Ultra160 SCSI synchronous data transfers as fast as
   160 Mbytes/s using Double Transition (DT) clocking for Channel A
- Performs wide, Ultra SCSI SE synchronous transfers as fast as 40 Mbytes/s for Channel B
- Enables LVD or SE termination on Channel A automatically
- Enables SE termination on Channel B automatically
- Contains internal 68-pin high density connectors for Channel A and Channel B
- Contains internal ribbon connector 50-pin for Channel B
- Contains external connector 68-pin high density for Channel A

Features 1-3

- Provides SCSI termination power (TERMPWR) source with autoresetting circuit protection device
- Includes 8 Kbytes internal RAM for SCRIPTS instruction storage for each channel
- Supports SCSI Plug and Play
- Supports variable block size and scatter/gather data transfers
- Performs complex bus sequences without interrupts, including restore data pointers
- Contains a serial EEPROM for user configuration utility
- Provides SCSI bus activity LED connector for each channel on one connector

#### 1.2.3 Board Characteristics

The LSI21040 characteristics are:

- PCI board dimensions: 152.4 x 88.90 mm (6.875 x 3.99 inches)
- PCI Universal 64-bit card edge connector
- One high density 68-pin external connector
- Two high density 68-pin internal connectors
- One 50-pin internal ribbon connector
- SCSI Bus Activity LED connector

In Chapter 3, "Specifying the Technical Characteristics," Figure 3.1 illustrates the mechanical drawing for this host adapter board.

# 1.2.4 SCSI Bus Activity LED Connector

A SCSI Bus Activity LED connector indicates the status of the SCSI bus when an LED is attached. This LED lights when the SCSI bus is transferring information.

### 1.3 Benefits of Ultra160 SCSI

Ultra160 SCSI delivers data up to two times faster than Ultra2 SCSI. Ultra160 SCSI is a subset of the SCSI Parallel Interface-3 (SPI-3) draft standard that allows faster synchronous SCSI data transfer rates than Ultra2 SCSI. When enabled, Ultra160 SCSI performs 80 megatransfers per second resulting in approximately double the synchronous data transfer rates of Ultra2 SCSI. The LSI53C1010 performs 16-bit, Ultra160 SCSI synchronous data transfers as fast as 160 Mbytes/s. This advantage is most noticeable in heavily loaded systems or large block size applications, such as video on-demand and image processing.

## 1.3.1 Double Transition (DT) Clocking

Ultra160 SCSI includes DT clocking in order to double data transfer speeds without increasing the clock rate. As a result, data is clocked on both rising and falling edges of the Request and Acknowledge signals.

# 1.3.2 Cyclic Redundancy Check (CRC)

Ultra160 SCSI includes CRC to provide data bus protection. CRC offers higher levels of data reliability by ensuring complete integrity of transferred data. CRC is a 32-bit scheme, referred to as CRC-32. CRC is guaranteed to detect all single bit errors, all double bit errors, or any combination of errors within a single 32-bit range.

#### 1.3.3 Domain Validation

Ultra160 SCSI also includes Domain Validation to provide basic integrity checking. Domain Validation is a procedure that allows a host computer and target SCSI peripheral to negotiate and find the optimal transfer speed. This procedure improves overall reliability of the system. SURElink™ extends this feature by providing three levels of integrity checking. Refer to Section 1.6, "Benefits of SURElink (Extended Domain Validation)," on page 1-7 for more detailed information.

# 1.3.4 Asynchronous Information Protection (AIP)

The LSI53C1010 supports AIP to protect all non-data phases, including command, status, and messages. CRC, along with AIP, provides end-to-end protection of the SCSI I/O.

# 1.4 Benefits of LVD Link Technology

To support greater device connectivity and a longer SCSI cable, the LSI21040 features LVD Link technology, the LSI Logic implementation of Universal LVD SCSI. LVD Link transceivers provide the inherent reliability of differential SCSI, and a long-term migration path to faster SCSI transfer rates.

The LVD Link transceivers reduce the power needed to drive the SCSI bus, so that the I/O drivers can be integrated directly into the chip. LVD Link technology lowers the amplitude of noise reflections and allows higher transmission frequencies.

The LVD Link transceivers operate in LVD and SE modes. They also allow the chip to detect a High Voltage Differential (HVD) signal when the chip is mistakenly connected to external HVD transceivers. When connected, the LSI53C1010 automatically detects signal type, based on the voltage detected. It automatically switches to the SE or LVD mode, as appropriate.

Important:

All bus devices must be LVD or SE. If a HVD device is detected, the board puts the SCSI bus in the high impedance state and shuts down.

# 1.5 Benefits of TolerANT® Technology

The LSI53C1010 features TolerANT technology, which includes active negation on the SCSI drivers and input signal filtering on the SCSI receivers. Active negation causes the SCSI Request, Acknowledge, Data, and Parity signals to be actively driven HIGH rather than passively pulled up by terminators.

TolerANT receiver technology improves data integrity in unreliable cabling environments where other devices would be subject to data corruption. TolerANT receivers filter the SCSI bus signals to eliminate unwanted transitions, without the long signal delay associated with RC-type input filters. This improved driver and receiver technology helps eliminate double clocking of data, which is the single biggest reliability issue with SCSI operations. TolerANT input signal filtering is a built-in feature of the LSI53C1010 and all LSI Logic Fast SCSI, Ultra SCSI, Ultra2 SCSI, and Ultra160 SCSI devices.

The benefits of TolerANT technology include increased noise immunity when the signal transitions to HIGH, better performance due to balanced duty cycles, and improved fast SCSI transfer rates. In addition, TolerANT SCSI devices do not cause glitches on the SCSI bus at power-up or power-down. This technology protects other devices on the bus from data corruption. When it is used with the LVD Link transceivers, TolerANT technology provides excellent signal quality and data reliability in real world cabling environments. TolerANT technology is compatible with both the Alternative One and Alternative Two termination schemes proposed by the American National Standards Institute.

# 1.6 Benefits of SURElink (Extended Domain Validation)

SURElink represents the very latest SCSI interconnect management solution. It ensures robust and low risk Ultra160 SCSI implementations by extending the Domain Validation guidelines documented in the ANSI T10 SPI-3 specifications. Domain Validation verifies that the system is capable of transferring data at Ultra160 speeds, allowing it to renegotiate to lower speed and bus width if necessary.

SURElink is the software control for the manageability enhancements in the LSI53C1010. Fully integrated in the SDMS software solution, SURElink provides Domain Validation at boot time as well as throughout system operation. SURElink extends to the Distributed Management Interface (DMI) based System Management components of SDMS, providing the network administrator remote management capability.

SURElink Domain Validation provides three levels of integrity checking: Basic (level 1), Enhanced (level 2), and Margined (level 3). The basic check consists of an inquiry command to detect gross problems. The

enhanced check sends a known data pattern using the Read and Write Buffer commands to detect additional problems. The margined check verifies that the physical parameters have some degree of margin.

By varying LVD drive strength and REQ/ACK timing characteristics, level 3 verifies that no errors occur on the transfers. These altered signals are only used during the diagnostic check and not during normal system operation. Should errors occur with any of these checks, the system can drop back to a lower transmission speed, on a per-target basis, to ensure robust system operation.

# Chapter 2 Installing the LSI21040

This chapter provides instructions on how to install the LSI21040 and includes these topics:

- Section 2.1, "Quick Installation Procedure," page 2-1
- Section 2.2, "Detailed Installation Procedure," page 2-2
- Section 2.3, "Completing the Installation," page 2-25
- Section 2.4, "Troubleshooting," page 2-26

### 2.1 Quick Installation Procedure

This section provides an overview of the installation procedure. If you are an experienced computer user with prior host adapter installation and SCSI bus setup experience, this section may sufficiently describe the procedure for you. If you prefer a more detailed guidance for installing the LSI21040, proceed to Section 2.2, "Detailed Installation Procedure."

For safe and proper installation, check the user's manual supplied with your computer and perform the following steps.

- Step 1. Ground yourself before removing this host adapter board.
- Step 2. Remove the LSI21040 from the packing and check that it is not damaged.
  - Figure 2.1 illustrates an example of this host adapter board. Also refer to Figure 3.1 to see a more detailed drawing of this board.
- Step 3. Open your PC cabinet and select an appropriate open PCI slot.
- Step 4. Insert the host adapter board.
- Step 5. Connect the internal and external SCSI peripherals.

Step 6. Terminate the SCSI bus.

The SCSI bus requires proper termination and no duplicate SCSI IDs.

- Step 7. Set the peripheral SCSI IDs.
- Step 8. Make any configuration changes.
- Step 9. Close your PC cabinet cover.
- Step 10. Make all external SCSI bus connections.
- Step 11. Refer to the *PCI Storage Device Management System SDMS*4.0 User's Guide (or the guide for the software you will use) to load the driver software for your particular operating system.

# 2.2 Detailed Installation Procedure

This section provides step-by-step instructions for installing the LSI21040, and connecting it to your SCSI peripherals. If you are experienced in these tasks, you may prefer to use Section 2.1, "Quick Installation Procedure."

#### 2.2.1 Before You Start

Before starting, look through the following task list to get an overall idea of the steps you will be performing. If you are not confident you can perform the tasks as described here, LSI Logic recommends getting assistance.

The SCSI host adapter acts on your computer's behalf as the host to your suite of SCSI peripherals. Each chain of SCSI peripheral devices and their host adapter work together. They are referred to as a SCSI bus.

Each SCSI host adapter that you install can act as host for up to 15 peripheral devices, not including the adapter itself. Follow the detailed instructions in the next section to successfully install your host adapter board.

## 2.2.2 Inserting the Host Adapter

For safe and proper installation, you will need the user's manual supplied with your computer. Perform the following steps to install the LSI21040.

- Step 1. *Ground yourself* before removing this host adapter board.
- Step 2. Remove the LSI21040 from the packing and check that it is not damaged.

Figure 2.1 illustrates an example of this host adapter board. Also refer to Figure 3.1 to see a more detailed drawing of this board.


- Step 3. Switch off the computer and unplug power cords for all components in your system.
- Step 4. Remove the cover from your computer per the instructions in the user's manual for your system to access the PCI slots.
  - <u>Caution:</u> Ground yourself by touching a metal surface before removing the cabinet top. Static charges on your body can damage electronic components. Handle plug-in boards by the edge; do not touch board components or gold connector contacts. The use of a static ground strap is recommended.
- Step 5. Locate the slots for PCI plug-in board installation.

Refer to the user's manual for your computer to confirm the location of the PCI slots.

The LSI21040 requires a 32-bit or 64-bit PCI slot that allows bus master operation. If a 32-bit PCI slot is used, bits [31:0] of the J1 connector are inserted while bits [63:32] remain uninserted. See Figure 2.2.

- Note: For the LSI21040 to function as a 64-bit device, it must be inserted in a 64-bit PCI slot. If the LSI21040 is inserted in a 32-bit PCI slot, it will function as a 32-bit device.
- Step 6. Remove the blank bracket panel on the back of the computer aligned with the PCI slot you intend to use. Save the bracket screw.

Figure 2.1 Hardware Connections for the LSI21040

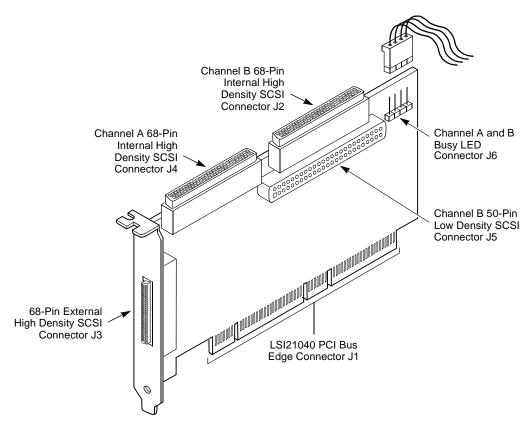


Step 7. Carefully insert edge connector J1 (see Figure 2.1) of the host adapter into the PCI slot.

Make sure the edge connector is properly aligned before pressing the board into place as shown in Figure 2.2. The bracket around connector J3 should fit where you removed the blank panel.

Note: You may notice that the components on a PCI host adapter face the opposite way from non-PCI adapter boards you have in your system. This orientation is correct. The board is keyed and will only go in one way.

Figure 2.2 Inserting the Host Adapter

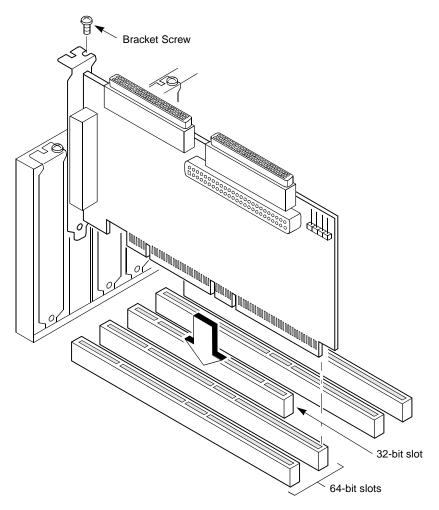

Step 8. Secure the board with the bracket screw (see Figure 2.2) before making the internal and external SCSI bus connections.

## 2.2.3 Connecting the SCSI Peripherals

All internal SCSI bus connections to the LSI21040 are made with an unshielded 68 conductor Ultra SCSI TPE ribbon cable (see Figure 2.3) and also a 50-pin ribbon cable. The lead connected to pin 1 on the cable is marked with a colored stripe. The connectors on this cable may also be keyed to ensure proper pin connection.

All external SCSI bus connections to the LSI21040 are made with high quality shielded 68 conductor cables (see Figure 2.3). The connectors on this cable are always keyed to ensure proper pin connection.

Note: All the cables shown in Figure 2.3 are included in the LSI Logic Adapter Board Kit for the LSI21040.

Table 2.1 provides a list of the SCSI bus width and maximum data transfer rate for various SCSI definitions.

Table 2.1 SCSI Bus Widths and Speeds

STA Terms	SCSI Bus Width, Bits	SCSI Bus Speed Maximum Data Rate, Mbytes/s	
SCSI-1	8	5	
Fast SCSI	8	10	
Fast Wide SCSI	16	20	
Ultra SCSI	8	20	
Wide Ultra SCSI	16	40	
Wide Ultra2 SCSI	16	80	
Ultra160 SCSI	16	160	

You can connect up to eight SCSI, Fast SCSI, and Ultra SCSI devices on an SE Ultra SCSI bus only if they are evenly spaced on a 1.5-meter Ultra SCSI cable (0.19 m between devices).

You can connect up to four devices if they are evenly spaced on a 3-meter Ultra SCSI cable (0.75 m between devices). Your SE SCSI bus should not exceed 3 meters (total internal and external cable lengths), even with fewer than four devices.

For LVD applications, you can connect up to 16 devices including the host adapter if they are evenly spaced on a 12-meter Ultra SCSI cable (0.19 m minimum between devices). Table 2.2 provides a list of the maximum bus lengths and the maximum number of devices for various SCSI definitions.

Table 2.2 SCSI Bus Lengths

	Maximun			
	SE	Differential	LVD	Maximum # of Devices
SCSI-1	6	25	12	8
Fast SCSI	3	25	12	8
Fast Wide SCSI	3	25	12	16
Ultra SCSI	1.5 <sup>2</sup>	25	12	8
Ultra SCSI	3 <sup>2</sup>	_	-	4
Wide Ultra SCSI	_	25	12	16
Wide Ultra SCSI	1.5	_	_	8
Wide Ultra SCSI	3	_	-	4
Ultra2 SCSI	Note <sup>3</sup>	Note <sup>3</sup>	12	8
Wide Ultra2 SCSI	Note <sup>3</sup>	Note <sup>3</sup>	12	16
Ultra160 SCSI	Note <sup>3</sup>	Note <sup>3</sup>	12	16

<sup>1.</sup> This parameter may be exceeded in point-to-point and engineered applications.

<sup>2.</sup> Additional spacing rules apply.


<sup>3.</sup> SE and high power differential are not defined at Ultra2 or Ultra160 speeds.

Figure 2.3 SCSI Cables


# SCSI Cable for Internal Connections 68-Pin High Density



# and/or 50-Pin Low Density



# SCSI Cable for External Connections 68-Pin High Density

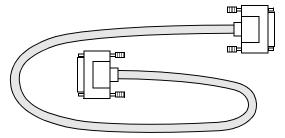


# 2.2.4 Making Internal SCSI Bus Connections

This section provides step-by-step instructions about making internal SCSI bus connections.

Step 1. Plug one end of the 68-pin internal SCSI ribbon cable into connector J4 or J2. Figure 2.4 illustrates an example for this step.

<u>Important:</u> You must match pin 1 on this and all subsequent connections.


Figure 2.4 Internal SCSI Ribbon Cable to Host Adapter Connection

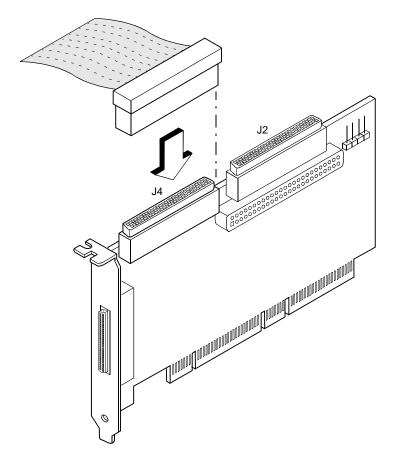

Step 2. If you have only two internal devices to connect, plug the other end of the internal SCSI ribbon cable into the SCSI connector on your internal SCSI device. Figure 2.5 illustrates an example of this connection.

Note: For nonterminated internal SCSI devices, a terminated cable will be required. This connector must be on the end of the SCSI cable.

Figure 2.5 Internal SCSI Ribbon Cable to Internal SCSI Device Connection

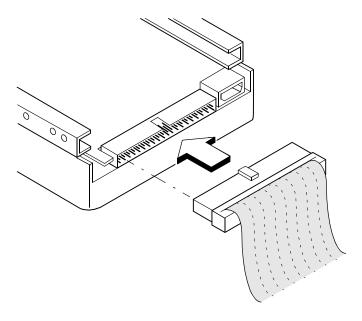


If you have more than one internal device to connect, use an internal SCSI ribbon cable with the required number of connectors attached along its length and proceed to the next step. Figure 2.6 illustrates this type of a connection. If you have only one internal device, proceed to Step 4 on page 2-13.

Step 3. Plug the cable into each additional device as needed.

Figure 2.7 provides an example of this type of chained connection. Make sure to match pin 1 on all connections.

Figure 2.6 Connecting Additional Internal SCSI Devices

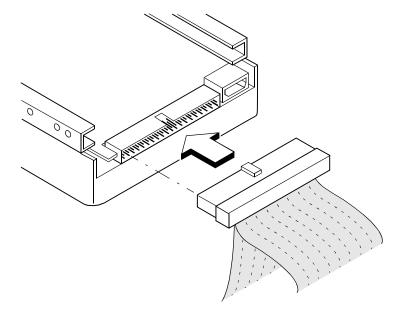

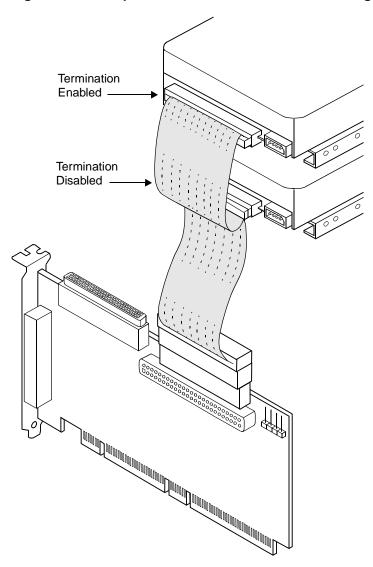


Figure 2.7 Multiple Internal SCSI Devices Chained Together


Most PC cabinets are designed with a front panel LED.

Step 4. Connect the LED cable to connector J6 on the host adapter, as shown in Figure 2.8.

When properly connected, the front panel LED lights when there is activity on the SCSI bus.

Connector J6 is not keyed. The orientation of the LED cable should not matter as long as all four pins are connected. If the LED does not light during SCSI bus activity from this host adapter, you may have to rotate the LED cable connector 180° on J6.

Figure 2.8 SCSI LED Connector

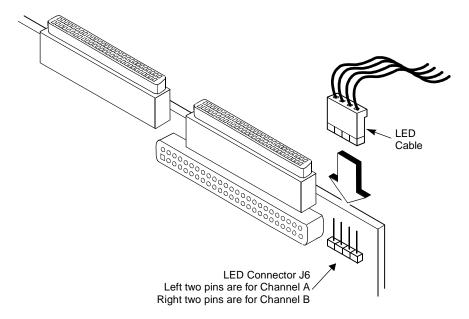

Some LED cables have only two wires. In this case, place the connector on one end or the other of J6. If the LED does not light when there is SCSI activity, put the connector on the other half of J6.

## 2.2.5 Making External SCSI Bus Connections

This section provides step-by-step instructions about making external SCSI bus connections. To connect external SCSI devices to the LSI21040, follow these steps:

Step 1. Plug the 68-pin HD connector on one end of a shielded external SCSI cable into the host adapter connector J3. (Figure 2.3 provides examples of SCSI cables to use.)

This connector is in the bracket attached to the back panel of your computer. Figure 2.9 shows how this connection is made.


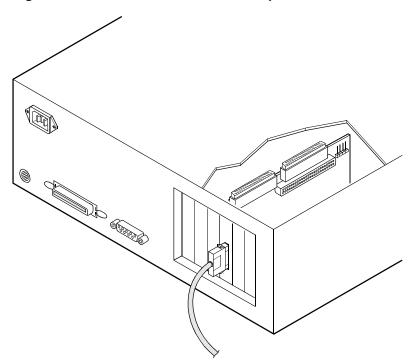


Figure 2.9 External Cable to Host Adapter

Step 2. Plug the 68-pin connector on the other end of the shielded external SCSI cable into the SCSI connector on your external SCSI device. Figure 2.10 illustrates an example of this connection.



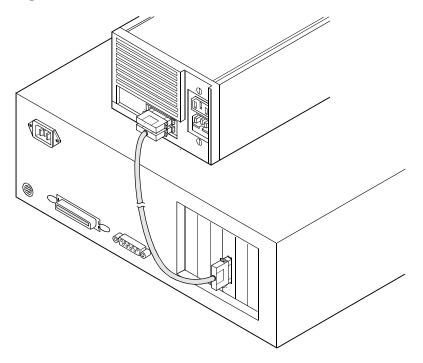


If this is the only external SCSI device on your system, proceed to Section 2.2.6, "SCSI Bus Termination," on page 2-17 for termination instructions. If you have multiple SCSI devices, proceed to the next page.

Step 3. Chain multiple devices together with shielded external SCSI cables.

Figure 2.11 illustrates an example of these chained connections.

Figure 2.11 Multiple External SCSI Devices Chained Together

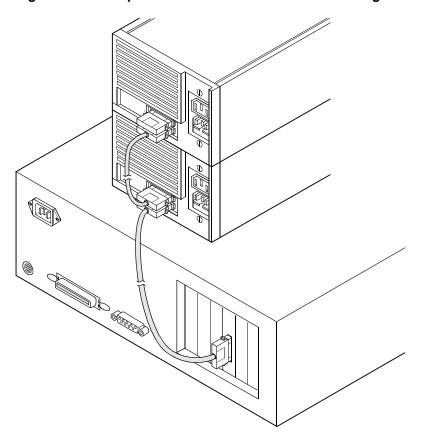

After you have connected all of your internal and external devices, proceed to Section 2.2.6, "SCSI Bus Termination."

#### 2.2.6 SCSI Bus Termination

The devices making up the SCSI bus are connected serially (chained together) with SCSI cables. The first and last physical SCSI devices connected on the ends of the SCSI bus must have their terminators active. All other SCSI devices on the bus must have their terminators removed or disabled. Remember that the LSI21040 is also on the SCSI bus—its termination is automatically enabled when it is connected to the end of the bus.

#### Important:

To utilize Ultra2 and faster SCSI performance, you must only have LVD devices on the bus. Do not mix any SE devices with LVD devices or the entire bus will drop to SE, limiting bus performance to Ultra SCSI levels.

The peripheral device terminators are usually set with jumpers, resistor modules, or with a switch on the peripheral. Refer to the peripheral manufacturer's instructions and to the user's manual for your computer for information on how to identify the terminator type/setting for each device and how to set/change it.

#### Caution:

The autoenable/disable sensing feature on the LSI21040 may enable termination erroneously if it is directly cabled to another SCSI device or host adapter using the same sensing method. The LSI21040 senses the presence of SCSI devices by detecting the ground signal on conductor 50 of the 68-pin SCSI cable and conductor 22 on the 50-pin SCSI cable.

The LSI21040 automatically controls SCSI bus termination for three different bus configurations, depending on how it is connected (see Figure 2.1). The three bus configurations are:

- Section 2.2.6.1, "Internal Bus Connections"
- Section 2.2.6.2, "External Bus Connections"
- Section 2.2.6.3, "Internal and External Bus Connections"

Termination on the LSI21040 for these three different bus configurations is discussed below.

#### 2.2.6.1 Internal Bus Connections

If only internal SCSI device connections to your host adapter have been made, you must terminate the last internal device on the SCSI bus. You must disable the terminators on all other devices. Termination on your host adapter is automatically enabled in this case.

Figure 2.12 shows an example of how termination is determined for this SCSI bus configuration.

Termination Enabled Termination Disabled 

Figure 2.12 Internal SCSI Device Termination

### 2.2.6.2 External Bus Connections

If only external SCSI device connections to your host adapter have been made, you must terminate the last external device on the SCSI bus. You must disable the terminators on all other devices. Termination on the host adapter is automatically enabled in this case.

Figure 2.13 shows an example of how termination is determined for this SCSI bus configuration.

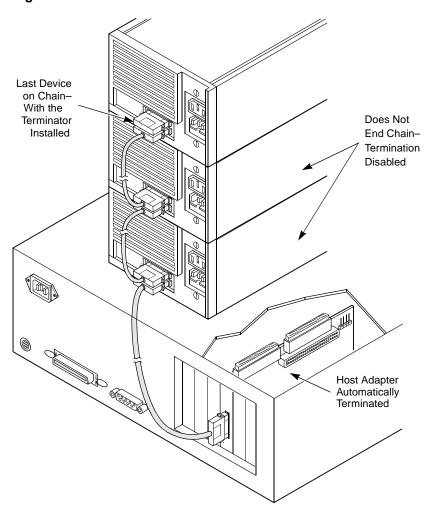


Figure 2.13 External SCSI Device Termination

### 2.2.6.3 Internal and External Bus Connections

If you have both internal and external SCSI device connections to your host adapter, you must terminate the last internal and last external devices on the SCSI bus. You must also disable the termination on all other devices. Termination on the host adapter is automatically disabled in this case.

Figure 2.14 shows an example of how termination is determined for this SCSI bus configuration.

Last Device on Chain– Termination Enabled Does Not End Chain-Termination Disabled Last Device on Chain-

Figure 2.14 Internal and External SCSI Device Termination

Termination Enabled

### 2.2.7 Setting SCSI IDs

You must set each SCSI device and the host adapter to a separate SCSI ID 0 through 15. SCSI ID 7 is the preset host adapter setting, giving it the highest priority on the SCSI bus. If you plan to boot your computer from a SCSI hard disk drive on the SCSI bus, that drive should have the lowest SCSI ID on the bus. Typically, SCSI ID 0 is used; however, for system performance optimization, an ID other than 0 (zero) can be used. Refer to Chapter 2 "SCSI BIOS" of the *PCI Storage Device Management System SDMS 4.0 User's Guide* about how to set the host adapter ID using the LSI Logic SCSI BIOS Configuration Utility.

The peripheral device SCSI IDs are usually set with jumpers or with a switch on the peripheral. Refer to the peripheral manufacturer's instructions and to the user's manual for your computer to determine the ID of each device and how to change it.

Note: You must not have any duplication of SCSI IDs on a SCSI bus.

- Step 1. Determine the SCSI ID of each device on the SCSI bus. Note any duplications.
- Step 2. Make any necessary changes to the SCSI IDs to eliminate duplicates and record the IDs for future reference.

Table 2.3 provides a place to keep this record.

Table 2.3 SCSI ID Record

SCSI ID	SCSI Device Channel A	SCSI Device Channel B
15		
14		
13		
12		
11		
10		
9		
8		
7	LSI21040 (default)	LSI21040 (default)
6		
5		
4		
3		
2		
1		
0		

# 2.3 Completing the Installation

Before replacing the cover on your computer, review this installation procedure check list. This can save you effort later.

Verify Installation Procedures	Done
Host adapter connection in PCI bus slot secure	
Internal SCSI bus connections secure (pin-1 continuity)	
External SCSI bus connections secure	
Proper SCSI bus termination established	
Unique SCSI IDs set and recorded for each device	

- Step 1. Replace the cabinet cover on your computer.
- Step 2. Plug in all power cords.
- Step 3. Switch power on to all devices and your computer.
- Step 4. Wait for your computer to boot up.
- Step 5. To change the configuration of the host adapter, refer to Chapter 2 "SCSI BIOS" of the *PCI Storage Device Management System SDMS 4.0 User's Guide.* 
  - Use this guide for LSI Logic software and driver information for various operating systems (or the user's guide for non-LSI Logic software you will be using).
- Step 6. Load the software and drivers suitable to your application and system.

# 2.4 Troubleshooting

Check these hardware items if problems arise:

- Cabling Use an unshielded 68 conductor Ultra SCSI TPE ribbon cable and a 50-pin ribbon cable for internal connections. Ensure the pin-1 orientation is correct for internal cables. Use a 68-pin high density SCSI cable for external connections.
- SCSI Devices Set each SCSI device and the host adapter to a separate SCSI ID 0 through 15. You must not have any duplication of SCSI IDs on a SCSI bus. The default SCSI ID for the host adapter is SCSI ID 7.
- Termination Automatic termination is enabled when the LSI21040 is connected to the end of the bus. For internal and/or external bus connections, terminate the last internal and/or external device on the SCSI bus.

# Chapter 3 Specifying the Technical Characteristics

This chapter provides specific details about the physical environment associated with the LSI21040. This chapter includes these topics:

- Section 3.1, "Physical Environment," page 3-1
- Section 3.2, "Operational Environment," page 3-4
- Section 3.3, "Subsystem and Subsystem Vendor ID," page 3-10

# 3.1 Physical Environment

This section provides information about the physical, electrical, thermal, and safety characteristics of the LSI21040. Additionally, this board is compliant with electromagnetic standards set by the FCC.

### 3.1.1 Physical Characteristics

The dimensions of the LSI21040 are 6.875 x 3.99 inches. Edge connector J1 makes the PCI connection.


Connectors J4 for Channel A and J2 for Channel B are the 68-pin high density connectors that make the internal SCSI connections. J5 is a 50-pin low density vertical connector for Channel B.

Connector J3 is a 68-pin high density connector that makes the external SCSI connection. The J3 connector extends externally to the cabinet through a bracket attached to the board and the face of the connector. The bracket is a standard ISA type with a cutout to accommodate connector J3.

Connector J6 provides connection to the computer's drive activity LED. This connector is a 4-pin one row right angle header. The left two pins are for Channel A SCSI activity, while the right two pins are for Channel B SCSI activity.

The component height on the top and bottom of the board conforms to the PCI Local Bus Specification Revision 2.2. Figure 3.1 illustrates the details of the LSI21040 mechanical drawing.

Figure 3.1 LSI21040 Mechanical Drawing

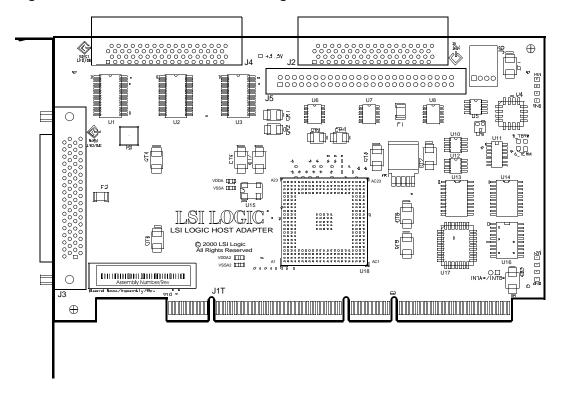

### 3.1.2 Electrical Characteristics

Under normal conditions, the LSI21040 maximum power requirement that includes SCSI TERMPWR is: +5 V DC,  $\pm 5\%$ , 3.0 A, and over the operating range 0 °C to 55 °C.

Under abnormal conditions, such as a short on SCSI TERMPWR, +5 V current may be higher. At temperatures of at least 25 °C, a current of 4 A is sustained no longer than 30 seconds before the self-resetting TERMPWR short circuit protection device (F1) opens.

The PCI PRSNT1/ and PRSNT2/ pins are set to indicate a 15 W maximum configuration.

### 3.1.3 Thermal, Atmospheric Characteristics

The thermal, atmospheric characteristics of the LSI21040 are:

- Temperature range: 0 °C to 55 °C (dry bulb)
- Relative humidity range: 5% to 90% noncondensing
- Maximum dew point temperature: 32 °C

The following parameters define the storage and transit environment for the LSI21040:

- Storage Temperature: –45 °C to +105 °C (dry bulb)
- Relative Humidity Range: 5% to 90% noncondensing

### 3.1.4 Electromagnetic Compliance

The board is designed and implemented to minimize electromagnetic emissions, susceptibility, and the effects of electromagnetic discharge. The board carries the CE mark, VCCI, Canada mark, and meets the requirements of FCC Class B. The board is marked with the FCC self-certification logo.

## 3.1.5 Safety Characteristics

The bare board meets or exceeds the requirements of UL flammability rating 94 V0. The bare board is also marked with the supplier's name or trademark, type, and UL flammability rating. Since this board is installed in a PCI bus slot, all voltages are below the SELV 42.4 V limit.

# 3.2 Operational Environment

Use the LSI21040 in PCI computer systems with an ISA/EISA bracket type. The SDMS operates the board, but the design of the board does not prevent the use of other software. An on-board flash memory device is provided to allow BIOS code and open boot code support through PCI and a serial EEPROM for each channel.

### 3.2.1 The PCI Interface

The PCI interface operates as a 64-bit DMA bus master. Edge connector J1 makes the PCI connection, which provides connections on both the front and back of the board. The signal definitions and pin numbers conform to the PCI Local Bus Specification Revision 2.2 standard. Table 3.1 and Table 3.2 show the signal assignments. The on-board +3.3 V regulator provides power to the PCI portion of the LSI53C1010 device.

Note:

The +3.3 V pins are tied together and decoupled with high frequency bypass capacitors to ground. No current from these +3.3 V pins is used on the board. The board derives power from the +5 V pins, directly and through a 3.3 V voltage regulator. The PCI +3 V/+5 V pins are used to differentiate between a 5 V or a 3.3 V PCI environment.

Table 3.1 PCI Connector J1 (Front)

Signal Name	Pin	Signal Name	Pin	Signal Name	Pin	Signal Name	Pin
-12 V	1	+3.3 V	25	M66EN	49	AD59	71
TCK	2	C_BE3/	26	KEYWAY	50	AD57	72
GND	3	AD23	27	KEYWAY	51	GND	73
TDO	4	GND	28	AD08	52	AD55	74
+5 V	5	AD21	29	AD07	53	AD53	75
+5 V	6	AD19	30	+3.3 V	54	GND	76
INTB/	7	+3.3 V	31	AD05	55	AD51	77
INTD/	8	AD17	32	AD03	56	AD49	78
GND (PRSNT1/)	9	C_BE2/	33	GND	57	+3 V / +5 V	79
RESERVED	10	GND	34	AD01	58	AD47	80
GND (PRSNT2/)	11	IRDY/	35	+3 V / +5 V	59	AD45	81
KEYWAY	12	+3.3 V	36	ACK64/	60	GND	82
KEYWAY	13	DEVSEL/	37	+5 V	61	AD43	83
RESERVED	14	GND	38	+5 V	62	AD41	84
GND	15	LOCK/	39	KEYWAY	xx	GND	85
CLK	16	PERR/	40	KEYWAY	xx	AD39	86
GND	17	+3.3 V	41	RESERVED	63	AD37	87
REQ/	18	SERR/	42	GND	64	+3 V / +5 V	88
+3 V / +5 V	19	+3.3 V	43	C_BE6/	65	AD35	89
AD31	20	C_BE1/	44	C_BE4/	66	AD33	90
AD29	21	AD14	45	GND	67	GND	91
GND	22	GND	46	AD63	68	RESERVED	92
AD27	23	AD12	47	AD61	69	RESERVED	93
AD25	24	AD10	48	+3 V / +5 V	70	GND	94
Note: Highlighted	signals	are not connected	d.	-			

Table 3.2 PCI Connector J1 (Back)

AD24 IDSEL +3.3 V AD22 AD20 GND AD18 AD16 +3.3 V FRAME/ GND TRDY/	25 26 27 28 29 30 31 32 33 34 35	AD09 KEYWAY KEYWAY C_BE0/ +3.3 V AD06 AD04 GND AD02 AD00 +3 V / +5 V	49 50 51 52 53 54 55 56 57 58	AD58 GND AD56 AD54 +3 V / +5 V AD52 AD50 GND AD48	71 72 73 74 75 76 77 78
+3.3 V AD22 AD20 GND AD18 AD16 +3.3 V FRAME/ GND	27 28 29 30 31 32 33 34	KEYWAY  C_BE0/ +3.3 V  AD06  AD04  GND  AD02  AD00	51 52 53 54 55 56 57	AD56 AD54 +3 V / +5 V AD52 AD50 GND AD48	73 74 75 76 77 78
AD22 AD20 GND AD18 AD16 +3.3 V FRAME/ GND	28 29 30 31 32 33 34	C_BE0/ +3.3 V AD06 AD04 GND AD02 AD00	52 53 54 55 56 57	AD54 +3 V / +5 V AD52 AD50 GND AD48	74 75 76 77 78
AD20 GND AD18 AD16 +3.3 V FRAME/ GND	29 30 31 32 33 34	+3.3 V AD06 AD04 GND AD02 AD00	53 54 55 56 57	+3 V / +5 V AD52 AD50 GND AD48	75 76 77 78
GND AD18 AD16 +3.3 V FRAME/ GND	30 31 32 33 34	AD06 AD04 GND AD02 AD00	54 55 56 57	AD52 AD50 GND AD48	76 77 78
AD18 AD16 +3.3 V FRAME/ GND	31 32 33 34	AD04 GND AD02 AD00	55 56 57	AD50 GND AD48	77 78
AD16 +3.3 V FRAME/ GND	32 33 34	GND AD02 AD00	56 57	GND AD48	78
+3.3 V FRAME/ GND	33	AD02 AD00	57	AD48	
FRAME/ GND	34	AD00		-	79
GND			58	AD 40	
	35	+3 V / +5 V		AD46	80
TRDY/		1	59	GND	81
INDI/	36	REQ64/	60	AD44	82
GND	37	+5 V	61	AD42	83
STOP/	38	+5 V	62	+3 V / +5 V	84
+3.3 V	39	KEYWAY	xx	AD40	85
SDONE	40	KEYWAY	xx	AD38	86
SBO/	41	GND	63	GND	87
GND	42	C_BE7/	64	AD36	88
PAR	43	C_BE5/	65	AD34	89
AD15	44	+3 V / +5 V	66	GND	90
+3.3 V	45	PAR64	67	AD32	91
	46	AD62	68	RESERVED	92
AD13	47	GND	69	GND	93
AD13 AD11				RESERVED	94
	AD15 +3.3 V AD13	AD15 44 +3.3 V 45 AD13 46	AD15 44 +3 V / +5 V +3.3 V 45 PAR64 AD13 46 AD62 AD11 47 GND	AD15 44 +3 V / +5 V 66 +3.3 V 45 PAR64 67 AD13 46 AD62 68 AD11 47 GND 69	AD15

Note: Highlighted signals are not connected.

### 3.2.2 The SCSI Interface

The SCSI interface conforms to ANSI X 3T10.11/1142. The SCSI interface operates as 16-bit, synchronous or asynchronous, SE or LVD, and supports Ultra160 SCSI protocols. Arbitration is supported for 8-bit (at lower SCSI speeds) and 16-bit. Active SE or LVD SCSI termination is provided automatically. SCSI termination power is supplied by the board.

Connectors J3 and J4 for Channel A and J2 and J5 for Channel B make the SCSI interface. Refer to Figure 2.1 on page 2-4 to see an example of this interface. J2 and J4 are 68-pin high density right angle connectors for internal SCSI connections. J5 is a 50-pin low density vertical connector. External connector J3 is a shielded 68-pin high density right angle connector exposed in the back panel bracket.

LVD/SE dual mode, active termination is provided on the LSI21040 for Channel A. SE SCSI termination is provided for Channel B. The LSI21040 supplies SCSI bus TERMPWR through a blocking diode and a self-resetting 1.5 A short circuit protection device. A 40 MHz oscillator is installed on the LSI21040. This oscillator provides the clock frequency necessary to support Ultra160 SCSI transfers of up to 160 Mbytes/s.

Table 3.3 and Table 3.4 show the signal assignments for J2 and J5. Table 3.5 and Table 3.6 show the signal assignments for J4 and J3.

Table 3.3 Internal Channel B SCSI Connector J2

Signal	Pin	Signal	Pin	Signal	Pin	Signal	Pin
GND	1	N/C	19	SD13	36	N/C	53
GND	2	GND	20	SD14	37	GND	54
GND	3	GND	21	SD15	38	SATN	55
GND	4	GND	22	SDP1	39	GND	56
GND	5	GND	23	SD0	40	SBSY	57
GND	6	GND	24	SD1	41	SACK	58
GND	7	GND	25	SD2	42	SRST	59
GND	8	GND	26	SD3	43	SMSG	60
GND	9	GND	27	SD4	44	SSEL	61
GND	10	GND	28	SD5	45	SC_D	62
GND	11	GND	29	SD6	46	SREQ	63
GND	12	GND	30	SD7	47	SI_O	64
GND	13	GND	31	SDP	48	SD8	65
GND	14	GND	32	GND	49	SD9	66
GND	15	GND	33	CPRSNT_A	50	SD10	67
GND	16	GND	34	TERMPWR	51	SD11	68
TERMPWR	17	SD12	35	TERMPWR	52		
TERMPWR	18						

Note: NC pins are not connected.

Table 3.4 Internal Channel B SCSI Connector J5

Signal	Pin	Signal	Pin	Signal	Pin	Signal	Pin
GND	1	SD6	14	N/C	27	GND	39
SD0	2	GND	15	N/C	28	SRST	40
GND	3	SD7	16	GND	29	GND	41
SD1	4	GND	17	GND	30	SMSG	42
GND	5	SDP	18	GND	31	GND	43
SD2	6	GND	19	SATN	32	SSEL	44
GND	7	GND	20	GND	33	GND	45
SD3	8	GND	21	GND	34	SC_D	46
GND	9	CPRSNT_C	22	GND	35	GND	47
SD4	10	N/C	23	SBSY	36	SREQ	48
GND	11	N/C	24	GND	37	GND	49
SD5	12	N/C	25	SACK	38	SI_O	50
GND	13	TERMPWR	26				

Note: NC pins are not connected.

Table 3.5 Internal Channel A SCSI Connector J4

Signal	Pin	Signal	Pin	Signal	Pin	Signal	Pin
SD12+	1	TERMPWR	18	SD12-	35	TERMPWR	52
SD13+	2	N/C	19	SD13-	36	N/C	53
SD14+	3	GND	20	SD14-	37	GND	54
SD15+	4	SATN+	21	SD15-	38	SATN-	55
SDP1+	5	GND	22	SDP1-	39	GND	56
SD00+	6	SBSY+	23	SD00-	40	SBSY-	57
SD01+	7	SACK+	24	SD01-	41	SACK-	58
SD02+	8	SRST+	25	SD02-	42	SRST-	59
SD03+	9	SMSG+	26	SD03-	43	SMSG-	60
SD04+	10	SSEL+	27	SD04-	44	SSEL-	61
SD05+	11	SC_D+	28	SD05-	45	SC_D-	62
SD06+	12	SREQ+	29	SD06-	46	SREQ-	63
SD07+	13	SI_O+	30	SD07-	47	SI_O-	64
SDP+	14	SD08+	31	SDP-	48	SD08-	65
GND	15	SD09+	32	GND	49	SD09-	66
DIFFSENS	16	SD10+	33	CPRSNT/	50	SD10-	67
TERMPWR	17	SD11+	34	TERMPWR	51	SD11-	68

Note: NC pins are not connected.

Table 3.6 External SCSI Connector J3

Signal	Pin	Signal	Pin	Signal	Pin	Signal	Pin
SD12+	1	TERMPWR	18	SD12-	35	TERMPWR	52
SD13+	2	N/C	19	SD13-	36	N/C	53
SD14+	3	GND	20	SD14-	37	GND	54
SD15+	4	SATN+	21	SD15-	38	SATN-	55
SDP1+	5	GND	22	SDP1-	39	GND	56
SD00+	6	SBSY+	23	SD00-	40	SBSY-	57
SD01+	7	SACK+	24	SD01-	41	SACK-	58
SD02+	8	SRST+	25	SD02-	42	SRST-	59
SD03+	9	SMSG+	26	SD03-	43	SMSG-	60
SD04+	10	SSEL+	27	SD04-	44	SSEL-	61
SD05+	11	SC_D+	28	SD05-	45	SC_D-	62
SD06+	12	SREQ+	29	SD06-	46	SREQ-	63
SD07+	13	SI_O+	30	SD07-	47	SI_O-	64
SDP+	14	SD08+	31	SDP-	48	SD08-	65
GND	15	SD09+	32	GND	49	SD09-	66
DIFFSENS	16	SD10+	33	CPRSNT/	50	SD10-	67
TERMPWR	17	SD11+	34	TERMPWR	51	SD11-	68

Note: NC pins are not connected.

### 3.2.3 SCSI Activity LED Interface

The SCSI activity LED interface on the LSI21040 is a four-wire arrangement that allows you to connect an LED harness to the board. The buffered GPIO0\_FETCH line (maximum output low voltage 0.4 V and minimum output low current 16 mA) is pulled low to complete the circuit when a harness with an LED is attached. Connector J6 is the SCSI busy LED connector. Table 3.7 provides the signal definitions for the SCSI Busy LED connector.

Table 3.7 LED Connector J6

Signal Name	Pin
Channel A LED+	1
Channel A LED-	2
Channel B LED-	3
Channel B LED+	4

# 3.3 Subsystem and Subsystem Vendor ID

The Subsystem ID and System Vendor ID for the LSI21040 are provided in Table 3.8. The EEPROM of the LSI21040 contains the ID numbers. During system initialization, the ID numbers are loaded into the Subsystem Vendor ID and Subsystem ID registers of the LSI21040 SCSI Controller (the LSI53C1010). For more information on the operation of the Subsystem Vendor ID and Subsystem ID registers, refer to the LSI53C1010-33 PCI to Dual Channel Ultra3 SCSI Multifunction Controller Technical Manual.

Table 3.8 Subsystem and Subsystem Vendor ID

Subsystem	ID Number
Subsystem Vendor ID	1000
Subsystem ID	1040

# Appendix A Glossary of Terms and Abbreviations

160/m An industry initiative extension of the Ultra160 SCSI specification that

requires support of Double Transition Clocking, Domain Validation, and

Cyclic Redundancy Check.

Active Termination

The electrical connection required at each end of the SCSI bus,

composed of active voltage regulation and a set of termination resistors.

Ultra, Ultra2, and Ultra160 SCSI require active termination.

**Address** A specific location in memory, designated either numerically or by a

symbolic name.

AIP Asynchronous Information Protection provides error checking for

asynchronous, nondata phases of the SCSI bus.

Asynchronous Data Transfer One of the ways data is transferred over the SCSI bus. It is slower than

synchronous data transfer.

BIOS Basic Input/Output System. Software that provides basic read/write

capability. Usually kept as firmware (ROM based). The system BIOS on the mainboard of a computer is used to boot and control the system. The SCSI BIOS on the host adapter acts as an extension of the system BIOS.

Bit A binary digit. The smallest unit of information a computer uses. The

value of a bit (0 or 1) represents a two-way choice, such as on or off,

true or false, and so on.

**Bus** A collection of unbroken signal lines across which information is

transmitted from one part of a computer system to another. Connections

to the bus are made using taps on the lines.

**Bus Mastering** A high-performance way to transfer data. The host adapter controls the

transfer of data directly to and from system memory without interrupting the computer's microprocessor. This is the fastest way for multitasking

operating systems to transfer data.

Byte A unit of information consisting of eight bits.

**CISPR** A special international committee on radio interference (Committee,

International and Special, for Protection in Radio).

**Configuration** Refers to the way a computer is set up; the combined hardware

components (computer, monitor, keyboard, and peripheral devices) that make up a computer system; or the software settings that allow the

hardware components to communicate with each other.

**CPU** Central Processing Unit. The "brain" of the computer that performs the

actual computations. The term Microprocessor Unit (MPU) is also used.

CRC Cyclic Redundancy Check is an error detection code used in Ultra160

SCSI. Four bytes are transferred with the data to increase the reliability of data transfers. CRC is used on the Double Transition (DT) Data-In and

DT Data-Out phases.

**Device Driver** A program that allows a microprocessor (through the operating system)

to direct the operation of a peripheral device.

**DMA** Direct Memory Access.

Differential SCSI A hardware configuration for connecting SCSI devices. It uses a pair of

lines for each signal transfer (as opposed to Single-Ended SCSI which

references each SCSI signal to a common ground).

DMA Bus A feature that allows a peripheral to control the flow of data to and from Master system memory by blocks, as opposed to PIO (Programmed I/O) where

the processor is in control and the flow is by byte.

**Domain**Domain Validation is a software procedure in which a host queries a

Validation device to determine its ability to communicate at the pegotiated Litra16

device to determine its ability to communicate at the negotiated Ultra160

data rate.

**DT Clocking** In Double Transition (DT) Clocking data is sampled on both the asserting

and deasserting edge of the REQ/ACK signal. DT clocking may only be

implemented on an LVD SCSI bus.

**Dword** A double word is a group of four consecutive bytes or characters that are

stored, addressed, transmitted, and operated on as a unit. The lower two address bits of the least significant byte must equal zero in order to be

Dword aligned.

**EEPROM** Electronically Erasable Programmable Read Only Memory. A memory

chip typically used to store configuration information. See NVRAM.

EISA Extended Industry Standard Architecture. An extension of the 16-bit ISA

bus standard. It allows devices to perform 32-bit data transfers.

External SCSI

Device

A SCSI device installed outside the computer cabinet. These devices are connected in a continuous chain using specific types of shielded cables.

Fast-20 The SCSI Trade Association (STA) supports the use of "Ultra SCSI" over

the term "Fast-20". Please see Ultra SCSI.

Fast-40 The SCSI Trade Association (STA) supports the use of "Ultra2 SCSI"

over the term "Fast-40". Please see Ultra2 SCSI.

Fast SCSI A standard for SCSI data transfers. It allows a transfer rate of up to

10 Mbytes/s over an 8-bit SCSI bus and up to 20 Mbytes/s over a 16-bit

SCSI bus.

**FCC** Federal Communications Commission.

**File** A named collection of information stored on a disk.

**Firmware** Software that is permanently stored in ROM. Therefore, it can be

accessed during boot time.

Hard Disk A disk made of metal and permanently sealed into a drive cartridge. A

hard disk can store very large amounts of information.

**Host** The computer system in which a SCSI host adapter is installed. It uses

the SCSI host adapter to transfer information to and from devices

attached to the SCSI bus.

**Host Adapter** A circuit board or integrated circuit that provides a SCSI bus connection

to the computer system.

Internal SCSI

Device

A SCSI device installed inside the computer cabinet. These devices are connected in a continuous chain using an unshielded ribbon cable.

IRQ Interrupt Request Channel. A path through which a device can get the

immediate attention of the computer's CPU. The PCI bus assigns an IRQ

path for each SCSI host adapter.

**ISA** Industry Standard Architecture. A type of computer bus used in most

PCs. It allows devices to send and receive data up to 16 bits at a time.

**Kbyte** Kilobyte. A measure of computer storage equal to 1024 bytes.

**Local Bus** A way to connect peripherals directly to computer memory. It bypasses

the slower ISA and EISA buses. PCI is a local bus standard.

**Logical Unit** A subdivision, either logical or physical, of a SCSI device (actually the

place for the device on the SCSI bus). Most devices have only one logical unit, but up to eight are allowed for each of the eight possible devices on

a SCSI bus.

**LUN** Logical Unit Number. An identifier, zero to seven, for a logical unit.

LVD Link Low Voltage Differential Link allows greater Ultra2 SCSI device

connectability and longer SCSI cables. LVD Link lowers the amplitude of noise reflections and allows higher transmission frequencies. Detailed

information may be found in Section 1.4, "Benefits of LVD Link

Technology," on page 1-6.

Mainboard A large circuit board that holds RAM, ROM, the microprocessor, custom

integrated circuits, and other components that make a computer work. It also has expansion slots for host adapters and other expansion boards.

**Main Memory** The part of a computer's memory which is directly accessible by the CPU

(usually synonymous with RAM).

**Mbyte** Megabyte. A measure of computer storage equal to 1024 kilobytes.

**Motherboard** See Mainboard. In some countries, the term Motherboard is not

appropriate.

**Multitasking** The executing of more than one command at the same time. This allows

programs to operate in parallel.

**Multithreading** The simultaneous accessing of data by more than one SCSI device. This

increases the data throughput.

NVRAM NonVolatile Random Access Memory. Actually an EEPROM

(Electronically Erasable Read Only Memory chip) used to store

configuration information. See EEPROM.

Operating System

A program that organizes the internal activities of the computer and its peripheral devices. An operating system performs basic tasks such as moving data to and from devices, and managing information in memory.

It also provides the user interface.

Parity Checking A way to verify the accuracy of data transmitted over the SCSI bus. The

parity bit in the transfer is used to make the sum of all the 1 bits either odd or even (for odd or even parity). If the sum is not correct, the information may be retransmitted or an error message may appear.

Passive Termination

The electrical connection required at each end of the SCSI bus, composed of a set of resistors. It improves the integrity of bus signals.

PCI Peripheral Component Interconnect. A local bus specification that allows

connection of peripherals directly to computer memory. It bypasses the

slower ISA and EISA buses.

Peripheral Devices

A piece of hardware (such as a video monitor, disk drive, printer, or CD-ROM) used with a computer and under the computer's control. SCSI

peripherals are controlled through a SCSI host adapter.

Pin-1 Orientation The alignment of pin 1 on a SCSI cable connector and the pin-1 position on the SCSI connector into which it is inserted. External SCSI cables are always keyed to insure proper alignment, but internal SCSI ribbon cables sometimes are not keyed.

PIO Programmed Input/Output. A way the CPU can transfer data to and from

memory using the computer's I/O ports. PIO is usually faster than DMA,

but requires CPU time.

Port Address Also Port Number. The address through which commands are sent to a

host adapter board. This address is assigned by the PCI bus.

**Port Number** See Port Address.

Queue Tags A way to keep track of multiple commands that allow for increased

throughput on the SCSI bus.

RAM Random Access Memory. The computer's primary working memory in

which program instructions and data are stored and are accessible to the CPU. Information can be written to and read from RAM. The contents of

RAM are lost when the computer is turned off.

RISC Core LSI Logic SCSI chips contain a RISC (Reduced Instruction Set

Computer) processor, programmed through microcode SCRIPTS.

**ROM** Read Only Memory. Memory from which information can be read but not

changed. The contents of ROM are not erased when the computer is

turned off.

SCAM SCSI Configured AutoMatically. A method to automatically allocate SCSI

IDs using software when SCAM compliant SCSI devices are attached.

SCRIPTS The SCRIPTS processor allows users to fine tune SCSI operations with Processor

regard to unique vendor commands or new SCSI specifications. The SCRIPTS processor fetches SCRIPTS instructions from system memory

to control operation of the LSI53C8XX or LSI53C10XX device.

SCSI Small Computer System Interface. A specification for a high-performance

peripheral bus and command set. The original standard is referred to as

SCSI-1.

SCSI-2 The SCSI specification which adds features to the original SCSI

standard.

SCSI-3 The current SCSI specification which adds features to the SCSI-2

standard.

SCSI Bus A host adapter and one or more SCSI peripherals connected by cables

in a linear chain configuration. The host adapter may exist anywhere on the chain, allowing connection of both internal and external SCSI

devices. A system may have more than one SCSI bus by using multiple

host adapters.

SCSI Device Any device that conforms to the SCSI standard and is attached to the

SCSI bus by a SCSI cable. This includes SCSI host adapters and SCSI

peripherals.

SCSI ID A way to uniquely identify each SCSI device on the SCSI bus. Each SCSI

bus has eight available SCSI IDs numbered 0 through 7 (or 0 through 15 for Wide SCSI). The host adapter usually gets the highest ID, (7 or 15)

giving it priority to control the bus.

**SCSI SCRIPTS** A SCSI programming language that works with the SCRIPTS processor

that is embedded on the LSI53C8XX or LSI53C10XX device. These

SCRIPTS reside in host computer system memory.

SDMS Storage Device Management System. An LSI Logic software product that

manages SCSI system I/O.

Single-Ended SCSI

A hardware specification for connecting SCSI devices. It references each SCSI signal to a common ground. This is the most common method (as opposed to differential SCSI which uses a separate ground for each

signal).

STA SCSI Trade Association. A group of companies that cooperate to

promote SCSI parallel interface technology as a viable mainstream I/O

interconnect for commercial computing.

**SURElink** The domain validation method developed and used by LSI Logic.

SURElink provides three levels of integrity checking: Basic (level 1),

Enhanced (level 2), and Margined (level 3).

Synchronous Data Transfer One of the ways data is transferred over the SCSI bus. Transfers are clocked with fixed frequency pulses. This is faster than asynchronous data transfer. Synchronous data transfers are negotiated between the

SCSI host adapter and each SCSI device.

System BIOS Controls the low-level POST (Power-On Self-Test), and basic operation

of the CPU and computer system.

**TolerANT** A technology developed and used by LSI Logic to improve data integrity,

data transfer rates, and noise immunity, through the use of active

negation and input signal filtering.

Ultra SCSI A standard for SCSI data transfers. It allows a transfer rate of up to

20 Mbytes/s over an 8-bit SCSI bus and up to 40 Mbytes/s over a 16-bit SCSI bus. SCSI Trade Association (STA) supports using the term "Ultra

SCSI" over the older term "Fast-20".

Ultra2 SCSI A standard for SCSI data transfers. It allows a transfer rate of up to

40 Mbytes/s over an 8-bit SCSI bus, and up to 80 Mbytes/s over a 16-bit SCSI bus. SCSI Trade Association (STA) supports using the term "Ultra2"

SCSI" over the term "Fast-40".

**Ultra160 SCSI** A standard for SCSI data transfers. It allows a transfer rate of up to

160 Mbytes/s over a 16-bit SCSI bus.

**VCCI** Voluntary Control Council for Interference.

**VDE** Verband Deucher Elektroniker (Association of German Electrical

Engineers).

Virtual Memory Space on a hard disk that can be used as if it were RAM.

Wide SCSI A SCSI-2 feature allowing 16-bit or 32-bit transfers on the SCSI bus. This

dramatically increases the transfer rate over the standard 8-bit SCSI bus.

Wide Ultra SCSI Trade Association (STA) term for SCSI bus width 16-bits, SCSI

bus speed maximum data rate 40 Mbytes/s.

Wide Ultra2

SCSI

The SCSI Trade Association (STA) term for SCSI bus width 16-bits, SCSI

bus speed maximum data rate 80 Mbytes/s.

**Word** A two byte (or 16-bit) unit of information.

# Index

A	I
asynchronous information protection feature of Ultra160 1-6	inserting the host adapter 2-2, 2-5 installation procedure 2-2 installation procedure check list 2-25
В	internal SCSI bus connections 2-9 internal SCSI device connection 2-10
board characteristics 1-4 bus configurations 2-17	internal SCSI device termination 2-19 internal SCSI ribbon cable 2-9
С	L
chained connection 2-11, 2-16 connecting the SCSI peripherals 2-6 cyclic redundancy check feature of Ultra160 1-5  D	LED cable 2-13 connector 2-13 LED connector SCSI bus activity 1-4 LVD Link technology benefits 1-6
desktop management interface 1-7	M
detailed installation procedure 2-2 domain validation verifying 1-7	multiple internal SCSI devices 2-12
double transition clocking 1-5 duplication of SCSI IDs 2-23	0
E	operational environment 3-4
edge connector 2-4 electrical characteristics 3-2 electromagnetic compliance 3-3 erroneous termination 2-17 external SCSI bus connections 2-14 external SCSI device 2-15 external SCSI device termination 2-20	PCI connector J1 (back) 3-6 PCI connector J1 (front) 3-5 PCI interface 1-2, 3-4 peripheral device SCSI IDs 2-23 peripheral device terminators 2-17 physical characteristics 3-1 physical environment 3-1
features 1-2	R
front panel LED 2-13	ribbon cable 2-6
G	S
GPIO0_FETCH line 3-10	safety characteristics 3-3
Н	SCSI bus connections 2-6
hardware connections 2-4	bus termination 2-17 IDs 2-23 interface 1-3 to 1-4, 3-7 LED connector 2-13

```
SCSI (Cont.) peripherals 2-6
   ribbon cable 2-9
serial EEPROM 1-4
setting SCSI IDs 2-23
SURElink benefits 1-7
T
termination 2-17
   (erroneous) 2-17
thermal, atmospheric characteristics 3-3
TolerANT technology benefits 1-7
U
Ultra SCSI 2-6
Ultra160 SCSI 1-5
   asynchronous information protection 1-6
   benefits 1-5
   cyclic redundancy check 1-5
   domain validation 1-5
   double transition clocking 1-5
```

IX-2 Index

# **Customer Feedback**

We would appreciate your feedback on this document. Please copy the following page, add your comments, and fax it to us at the number shown.

If appropriate, please also fax copies of any marked-up pages from this document.

Important: Pl

Please include your name, phone number, fax number, and company address so that we may contact you directly for clarification or additional information.

Thank you for your help in improving the quality of our documents.

### Reader's Comments

LSI Logic Corporation Technical Publications Fax your comments to:

M/S E-198

Fax: 408.433.4333

Please tell us how you rate this document: LSI21040 PCI to Ultra160 SCSI Dual Channel Host Adapter User's Guide. Place a check mark in the appropriate blank for each category.

	Excellent	Good	Average	Fair	Poor
Completeness of information Clarity of information Ease of finding information Technical content Usefulness of examples and illustrations Overall manual					
What could we do to improve	this docu	ment?			
If you found errors in this do- number. If appropriate, pleas			•		
Please complete the informa directly for clarification or add			-	contact	you
Name			Date _		
Telephone		Fax			
Title					
Department			Mail Sto	ρ	
Company Name					
Street					
City, State, Zip					

# U.S. Distributors by State

Tel: 818.707.2101

I.E.

A. E. Avnet Electronics	Colorado	Illinois	Michigan
http://www.hh.avnet.com	Denver	North/South	Brighton
B. M. Bell Microproducts,	A. E. Tel: 303.790.1662	A. E. Tel: 847.797.7300	I. E. Tel: 810.2
Inc. (for HAB's)	B. M. Tel: 303.846.3065	Tel: 314.291.5350	Detroit
http://www.bellmicro.com	W. E. Tel: 800.933.9953	Chicago	A. E. Tel: 734.4
I. E. Insight Electronics	Englewood	B. M. Tel: 847.413.8530	W. E. Tel: 888.3
http://www.insight-electronics.com	I. E. Tel: 303.649.1800	W. E. Tel: 800.853.9953	Clarkston
W. E. Wyle Electronics	Idaho Springs	Schaumburg	B. M. Tel: 877.9
http://www.wyle.com	B. M. Tel: 303.567.0703	I. E. Tel: 847.885.9700	D. W. 101. 077.0
	2		Minnesota
Alabama	Connecticut	Indiana	Champlin
Daphne	Cheshire	Fort Wayne	B. M. Tel: 800.5
I. E. Tel: 334.626.6190	A. E. Tel: 203.271.5700	I. E. Tel: 219.436.4250	Eden Prairie
Huntsville	I. E. Tel: 203.272.5843	W. E. Tel: 888.358.9953	B. M. Tel: 800.2
A. E. Tel: 256.837.8700	Wallingford	Indianapolis	Minneapolis
B. M. Tel: 256.705.3559	W. E. Tel: 800.605.9953	A. E. Tel: 317.575.3500	A. E. Tel: 612.3
I. E. Tel: 256.830.1222			W. E. Tel: 800.8
W. E. Tel: 800.964.9953	Delaware	lowa	St. Louis Park
Alaska	North/South	W. E. Tel: 612.853.2280	I. E. Tel: 612.5
	A. E. Tel: 800.526.4812	Cedar Rapids	
A. E. Tel: 800.332.8638	Tel: 800.638.5988	A. E. Tel: 319.393.0033	Mississippi
Arizona	B. M. Tel: 302.328.8968	Vanaga	A. E. Tel: 800.6
Phoenix	W. E. Tel: 856.439.9110	Kansas	W. E. Tel: 256.8
A. E. Tel: 480.736.7000	Florido	W. E. Tel: 303.457.9953	Minanui
B. M. Tel: 602.267.9551	Florida	Kansas City	Missouri
W. E. Tel: 800.528.4040	Altamonte Springs	A. E. Tel: 913.663.7900	W. E. Tel: 630.6
Tempe	B. M. Tel: 407.682.1199	Lenexa	St. Louis
I. E. Tel: 480.829.1800	I. E. Tel: 407.834.6310	I. E. Tel: 913.492.0408	A. E. Tel: 314.2
Tucson	Boca Raton	Kentucky	I. E. Tel: 314.8
A. E. Tel: 520.742.0515	I. E. Tel: 561.997.2540	W. E. Tel: 937.436.9953	Montana
71. 2. 101. 020.7 12.00 10	Bonita Springs B. M. Tel: 941.498.6011	Central/Northern/ Western	A. E. Tel: 800.5
Arkansas		A. E. Tel: 800.984.9503	W. E. Tel: 801.9
W. E. Tel: 972.235.9953	Clearwater	Tel: 800.767.0329	VV. E. 101. 00 1.0
	I. E. Tel: 727.524.8850	Tel: 800.829.0146	Nebraska
California	Fort Lauderdale	101. 000.020.01 10	A. E. Tel: 800.3
Agoura Hills	A. E. Tel: 954.484.5482	Louisiana	W. E. Tel: 303.4
B. M. Tel: 818.865.0266	W. E. Tel: 800.568.9953 Miami	W. E. Tel: 713.854.9953	
Granite Bay	B. M. Tel: 305.477.6406	North/South	Nevada
B. M. Tel: 916.523.7047	Orlando	A. E. Tel: 800.231.0253	Las Vegas
Irvine	A. E. Tel: 407.657.3300	Tel: 800.231.5775	A. E. Tel: 800.5
A. E. Tel: 949.789.4100	W. E. Tel: 407.740.7450		W. E. Tel: 702.7
B. M. Tel: 949.470.2900	Tampa	Maine	New Hampshire
I. E. Tel: 949.727.3291	W. E. Tel: 800.395.9953	A. E. Tel: 800.272.9255	A. E. Tel: 800.2
W. E. Tel: 800.626.9953	St. Petersburg	W. E. Tel: 781.271.9953	W. E. Tel: 781.2
Los Angeles	A. E. Tel: 727.507.5000	Maryland	VV. L. 101. 701.2
A. E. Tel: 818.594.0404	A. L. 161. 727.307.3000	Baltimore	New Jersey
W. E. Tel: 800.288.9953	Georgia	A. E. Tel: 410.720.3400	North/South
Sacramento	Atlanta	W. E. Tel: 800.863.9953	A. E. Tel: 201.5
A. E. Tel: 916.632.4500	A. E. Tel: 770.623.4400	Columbia	Tel: 609.2
W. E. Tel: 800.627.9953	B. M. Tel: 770.980.4922	B. M. Tel: 800.673.7461	Mt. Laurel
San Diego	W. E. Tel: 800.876.9953	I. E. Tel: 410.381.3131	I. E. Tel: 856.2
A. E. Tel: 858.385.7500	Duluth	1. L. 161. 410.301.3131	Pine Brook
B. M. Tel: 858.597.3010	I. E. Tel: 678.584.0812	Massachusetts	B. M. Tel: 973.2
I. E. Tel: 800.677.6011		Boston	W. E. Tel: 800.8
W. E. Tel: 800.829.9953	Hawaii	A. E. Tel: 978.532.9808	Parsippany
San Jose	A. E. Tel: 800.851.2282	W. E. Tel: 800.444.9953	I. E. Tel: 973.2
A. E. Tel: 408.435.3500	Idaho	Burlington	Wayne
B. M. Tel: 408.436.0881		I. E. Tel: 781.270.9400	W. E. Tel: 973.2
I. E. Tel: 408.952.7000	A. E. Tel: 801.365.3800 W. E. Tel: 801.974.9953	Marlborough	
Santa Clara	W. E. Tel: 801.974.9953	B. M. Tel: 800.673.7459	New Mexico
W. E. Tel: 800.866.9953		Woburn	W. E. Tel: 480.8
Woodland Hills		B. M. Tel: 800.552.4305	Albuquerque
A. E. Tel: 818.594.0404			A. E. Tel: 505.2
Westlake Village			

Tel: 810.229.7710
Tel: 734.416.5800
Tel: 888.318.9953
n
Tel: 877.922.9363

Tel: 800.557.2566

Tel: 800.255.1469

Tel: 612.346.3000 Tel: 800.860.9953

Tel: 612.525.9999

Tel: 800.633.2918 Tel: 256.830.1119

Tel: 630.620.0969 Tel: 314.291.5350 Tel: 314.872.2182

Tel: 800.526.1741 Tel: 801.974.9953

Tel: 800.332.4375 Tel: 303.457.9953

Tel: 800.528.8471 Tel: 702.765.7117

Tel: 800.272.9255 Tel: 781.271.9953

Tel: 201.515.1641 Tel: 609.222.6400 el Tel: 856.222.9566

Tel: 973.244.9668 Tel: 800.862.9953 any Tel: 973.299.4425 Tel: 973.237.9010

Tel: 480.804.7000

Tel: 505.293.5119

### **U.S. Distributors** by State (Continued)

### New York

Hauppauge

Tel: 516.761.0960 I.E. Long Island

A. E. Tel: 516.434.7400 W. E. Tel: 800.861.9953 Rochester

A. E. Tel: 716.475.9130 I.E. Tel: 716.242.7790

W. E. Tel: 800.319.9953 Smithtown Tel: 800.543.2008

B. M. Syracuse

A. E. Tel: 315.449.4927

### **North Carolina**

Raleigh

A. E. Tel: 919.859.9159 I.E. Tel: 919.873.9922 W. E. Tel: 800.560.9953

### North Dakota

A. E. Tel: 800.829.0116 W. E. Tel: 612.853.2280

### Ohio

Cleveland

A. E. Tel: 216.498.1100 W. E. Tel: 800.763.9953

Dayton Tel: 614.888.3313 A. E. I.E. Tel: 937.253.7501 W. E. Tel: 800.575.9953 Strongsville

B. M. Tel: 440.238.0404 Valley View

Tel: 216.520.4333

### Oklahoma

I.E.

Tel: 972.235.9953 W. E. Tulsa

A. E. Tel: 918.459.6000 Tel: 918.665.4664 I.E.

### Oregon

Beaverton

B. M. Tel: 503.524.1075 I.E. Tel: 503.644.3300 Portland

A. E. Tel: 503.526.6200 W. E. Tel: 800.879.9953

### Pennsylvania

Mercer

I.E. Tel: 412.662.2707 Philadelphia

A. E. Tel: 800.526.4812 B. M. Tel: 877.351.2355 W. E. Tel: 800.871.9953 Pittsburgh

A. E. Tel: 412.281.4150 W. E. Tel: 440.248.9996

### Rhode Island

A. E. 800.272.9255 W. E. Tel: 781.271.9953

### South Carolina

A. E. Tel: 919.872.0712 W. E. Tel: 919.469.1502

### South Dakota

A. E. Tel: 800.829.0116 W. E. Tel: 612.853.2280

### Tennessee

W. E. Tel: 256.830.1119 East/West

Tel: 800.241.8182 A. E. Tel: 800.633.2918

### **Texas**

Arlington

B. M. Tel: 817.417.5993 Austin

A. E. Tel: 512.219.3700 B. M. Tel: 512.258.0725 I.E. Tel: 512.719.3090

W. E. Tel: 800.365.9953 Dallas

A. E. Tel: 214.553.4300 B. M. Tel: 972.783.4191 W. E. Tel: 800.955.9953

El Paso Tel: 800.526.9238 A. E.

Houston Tel: 713.781.6100 A. E. B. M. Tel: 713.917.0663

W. E. Tel: 800.888.9953 Richardson I.E. Tel: 972.783.0800

Rio Grande Vallev A. E. Tel: 210.412.2047 Stafford

I.E. Tel: 281.277.8200

### Utah

Centerville

Tel: 801.295.3900 B. M. Murray

Tel: 801.288.9001

I.E.

Salt Lake City A. E. Tel: 801.365.3800 W. E. Tel: 800.477.9953

### Vermont

A. E. Tel: 800.272.9255 W. E. Tel: 716.334.5970

### Virginia

A. Ĕ. Tel: 800.638.5988 W. E. Tel: 301.604.8488 Havmarket B. M. Tel: 703.754.3399 Springfield Tel: 703.644.9045 B. M.

### Washington

Kirkland

Tel: 425.820.8100 I.E. Maple Valley

Tel: 206.223.0080 B. M.

Seattle

A. E. Tel: 425.882.7000 W. E. Tel: 800.248.9953

### West Virginia

A. E. Tel: 800.638.5988

### Wisconsin

Milwaukee

A. E. Tel: 414.513.1500 W. E. Tel: 800.867.9953 Wauwatosa I.E. Tel: 414.258.5338

### Wyoming

A. E. Tel: 800.332.9326 W. E. Tel: 801.974.9953

# Direct Sales Representatives by State (Components and Boards)

E. A. Earle Associates
E. L. Electrodyne - UT
GRP Group 2000
I. S. Infinity Sales, Inc.
ION ION Associates, Inc.
R. A. Rathsburg Associates, Inc.
SGY Synergy Associates,

### Arizona

Tempe

E. A. Tel: 480.921.3305

### California

Calabasas

I. S. Tel: 818.880.6480 Irvine I. S. Tel: 714.833.0300 San Diego

E. A. Tel: 619.278.5441

### Illinois

Elmhurst

R. A. Tel: 630.516.8400

### Indiana

R. A.

Cicero R. A. Tel: 317.984.8608 Ligonier

R. A. Tel: 219.894.3184 Plainfield

Tel: 317.838.0360

### Massachusetts

Burlington

SGY Tel: 781.238.0870

### Michigan

Byron Center

R. A. Tel: 616.554.1460

Good Rich

R. A. Tel: 810.636.6060 Novi

R. A. Tel: 810.615.4000

### **North Carolina**

Cary

GRP Tel: 919.481.1530

### Ohio

Columbus

R. A. Tel: 614.457.2242

Dayton

R. A. Tel: 513.291.4001

Independence

R. A. Tel: 216.447.8825

### Pennsylvania

Somerset

R. A. Tel: 814.445.6976

### Texas Austin

ION Tel: 512.794.9006

Arlington

ION Tel: 817.695.8000 Houston ION Tel: 281.376.2000

### Utah

Salt Lake City

E. L. Tel: 801.264.8050

### Wisconsin

Muskego

R. A. Tel: 414.679.8250

Saukville

R. A. Tel: 414.268.1152

### Sales Offices and Design **Resource Centers**

LSI Logic Corporation Corporate Headquarters 1551 McCarthy Blvd Milpitas CA 95035 Tel: 408.433.8000 Fax: 408.433.8989

### NORTH AMERICA

### California

Irvine 18301 Von Karman Ave Suite 900 Irvine, CA 92612 ♦ Tel: 949.809.4600

Fax: 949.809.4444

Pleasanton Design Center 5050 Hopyard Road, 3rd Floor Suite 300

Pleasanton, CA 94588 Tel: 925.730.8800 Fax: 925.730.8700

San Diego 7585 Ronson Road Suite 100 San Diego, CA 92111 Tel: 858.467.6981 Fax: 858.496.0548

Silicon Valley 1551 McCarthy Blvd Sales Office M/S C-500 Milpitas, CA 95035

♦ Tel: 408.433.8000 Fax: 408.954.3353 Design Center M/S C-410 Tel: 408.433.8000 Fax: 408.433.7695

> Wireless Design Center 11452 El Camino Real Suite 210

San Diego, CA 92130 Tel: 858.350.5560 Fax: 858.350.0171

### Colorado

Boulder 4940 Pearl East Circle Suite 201 Boulder, CO 80301

♦ Tel: 303.447.3800 Fax: 303.541.0641

Colorado Springs 4420 Arrowswest Drive Colorado Springs, CO 80907 Tel: 719.533.7000 Fax: 719.533.7020

Fort Collins 2001 Danfield Court Fort Collins, CO 80525 Tel: 970.223.5100 Fax: 970.206.5549

### Florida

Boca Raton 2255 Glades Road Suite 324A Boca Raton, FL 33431 Tel: 561.989.3236 Fax: 561.989.3237

### Georgia

Alpharetta 2475 North Winds Parkway Suite 200 Alpharetta, GA 30004 Tel: 770.753.6146

Fax: 770.753.6147

### Illinois

Oakbrook Terrace Two Mid American Plaza Suite 800 Oakbrook Terrace, IL 60181 Tel: 630.954.2234 Fax: 630.954.2235

### Kentucky

Bowling Green 1262 Chestnut Street Bowling Green, KY 42101 Tel: 270.793.0010 Fax: 270.793.0040

### Maryland Bethesda

6903 Rockledge Drive Suite 230 Bethesda, MD 20817 Tel: 301.897.5800 Fax: 301.897.8389

### Massachusetts

Waltham 200 West Street Waltham, MA 02451 ◆ Tel: 781.890.0180

Fax: 781.890.6158

Burlington - Mint Technology 77 South Bedford Street Burlington, MA 01803 Tel: 781.685.3800 Fax: 781.685.3801

### Minnesota

Minneapolis 8300 Norman Center Drive Suite 730 Minneapolis, MN 55437 Tel: 612.921.8300

Fax: 612.921.8399

### **New Jersey**

Red Bank 125 Half Mile Road Suite 200 Red Bank, NJ 07701 Tel: 732.933.2656 Fax: 732.933.2643

Cherry Hill - Mint Technology 215 Longstone Drive Cherry Hill, NJ 08003 Tel: 856.489.5530 Fax: 856.489.5531

### New York

Fairport 550 Willowbrook Office Park Fairport, NY 14450 Tel: 716.218.0020 Fax: 716.218.9010

### **North Carolina** Raleigh

Phase II 4601 Six Forks Road Suite 528 Raleigh, NC 27609 Tel: 919.785.4520 Fax: 919.783.8909

Fax: 503.645.6612

### Oregon

Beaverton 15455 NW Greenbrier Parkway Suite 235 Beaverton, OR 97006 Tel: 503.645.0589

### Texas

Austin 9020 Capital of TX Highway North Building 1 Suite 150 Austin, TX 78759 Tel: 512.388.7294 Fax: 512.388.4171

Plano 500 North Central Expressway Suite 440 Plano, TX 75074

♦ Tel: 972.244.5000 Fax: 972.244.5001

Houston 20405 State Highway 249 Suite 450 Houston, TX 77070 Tel: 281.379.7800 Fax: 281.379.7818

### Canada Ontario

Ottawa 260 Hearst Way Suite 400 Kanata, ON K2L 3H1

◆ Tel: 613.592.1263 Fax: 613.592.3253

### INTERNATIONAL

### France

Paris LSI Logic S.A. Immeuble Europa 53 bis Avenue de l'Europe B.P. 139 78148 Velizy-Villacoublay Cedex, Paris

Tel: 33.1.34.63.13.13 Fax: 33.1.34.63.13.19

### Germany

Munich LSI Logic GmbH Orleansstrasse 4 81669 Munich

Tel: 49.89.4.58.33.0 Fax: 49.89.4.58.33.108

Stuttgart Mittlerer Pfad 4 D-70499 Stuttgart

◆ Tel: 49.711.13.96.90 Fax: 49.711.86.61.428

### Italy Milan

LSI Logic S.P.A.

Centro Direzionale Colleoni Palazzo Orione Ingresso 1 20041 Agrate Brianza, Milano Tel: 39.039.687371

Fax: 39.039.6057867

### Japan Tokyo

LSI Logic K.K. Rivage-Shinagawa Bldg. 14F 4-1-8 Kounan Minato-ku, Tokyo 108-0075

♦ Tel: 81.3.5463.7821 Fax: 81.3.5463.7820

### Osaka Crystal Tower 14F

1-2-27 Shiromi Chuo-ku, Osaka 540-6014

♦ Tel: 81.6.947.5281 Fax: 81.6.947.5287

### Sales Offices and Design Resource Centers (Continued)

### Korea

Seoul

# LSI Logic Corporation of Korea Ltd

10th Fl., Haesung 1 Bldg. 942, Daechi-dong, Kangnam-ku, Seoul, 135-283 Tel: 82.2.528.3400 Fax: 82.2.528.2250

### The Netherlands

Eindhoven

### LSI Logic Europe Ltd

World Trade Center Eindhoven Building 'Rijder' Bogert 26 5612 LZ Eindhoven Tel: 31.40.265.3580 Fax: 31.40.296.2109

### Singapore

Singapore

### LSI Logic Pte Ltd

7 Temasek Boulevard #28-02 Suntec Tower One Singapore 038987 Tel: 65.334.9061 Fax: 65.334.4749

### Sweden

Stockholm
LSI Logic AB
Finlandsgatan 14
164 74 Kista
Tel: 46.8.444.15.00

Fax: 46.8.444.15.00

### Taiwan

Taipei LSI Logic Asia, Inc.

### Taiwan Branch

10/F 156 Min Sheng E. Road Section 3 Taipei, Taiwan R.O.C.

Tel: 886.2.2718.7828 Fax: 886.2.2718.8869

### **United Kingdom**

Bracknell

### LSI Logic Europe Ltd

Greenwood House London Road

Bracknell, Berkshire RG12 2UB

◆ Tel: 44.1344.426544 Fax: 44.1344.481039

♦ Sales Offices with Design Resource Centers

### Australia

New South Wales Reptechnic Pty Ltd 3/36 Bydown Street

Neutral Bay, NSW 2089 ◆ Tel: 612.9953.9844 Fax: 612.9953.9683

### Belgium Acal nv/sa

Lozenberg 4 1932 Zaventem Tel: 32.2.7205983 Fax: 32.2.7251014

### China Beijing

### LSI Logic International Services Inc. Beijing Representative Office

Room 708 Canway Building 66 Nan Li Shi Lu Xicheng District Beijing 100045, China Tel: 86.10.6804.2534 to 38 Fax: 86.10.6804.2521

### France Rungis Cedex

### Azzurri Technology France

22 Rue Saarinen Sillic 274 94578 Rungis Cedex Tel: 33.1.41806310 Fax: 33.1.41730340

### Germany Haar

### EBV Elektronik

Hans-Pinsel Str. 4 D-85540 Haar Tel: 49.89.4600980 Fax: 49.89.46009840

### Munich

### Avnet Emg GmbH

Stahlgruberring 12 81829 Munich Tel: 49.89.45110102 Fax: 49.89.42.27.75

### Wuennenberg-Haaren Peacock AG

Graf-Zepplin-Str 14 D-33181 Wuennenberg-Haaren Tel: 49.2957.79.1692 Fax: 49.2957.79.9341

### Hong Kong Hong Kong

### AVT Industrial Ltd

Unit 608 Tower 1 Cheung Sha Wan Plaza 833 Cheung Sha Wan Road Kowloon, Hong Kong Tel: 852.2428.0008 Fax: 852.2401.2105

### Serial System (HK) Ltd

2301 Nanyang Plaza 57 Hung To Road, Kwun Tong Kowloon, Hong Kong Tel: 852.2995.7538 Fax: 852.2950.0386

### India

Bangalore

### Spike Technologies India Private Ltd

951, Vijayalakshmi Complex, 2nd Floor, 24th Main, J P Nagar II Phase, Bangalore, India 560078

♦ Tel: 91.80.664.5530 Fax: 91.80.664.9748

### Israel

Tel Aviv

### Eastronics Ltd 11 Rozanis Street

P.O. Box 39300 Tel Aviv 61392 Tel: 972.3.6458777 Fax: 972.3.6458666

### Japan

Tokyo

### Daito Electron

Sogo Kojimachi No.3 Bldg 1-6 Kojimachi Chiyoda-ku, Tokyo 102-8730 Tel: 81.3.3264.0326 Fax: 81.3.3261.3984

### Global Electronics Corporation

Nichibei Time24 Bldg. 35 Tansu-cho Shinjuku-ku, Tokyo 162-0833 Tel: 81.3.3260.1411 Fax: 81.3.3260.7100 Technical Center Tel: 81.471.43.8200

### Marubeni Solutions

1-26-20 Higashi Shibuya-ku, Tokyo 150-0001 Tel: 81.3.5778.8662 Fax: 81.3.5778.8669

### Shinki Electronics

Myuru Daikanyama 3F 3-7-3 Ebisu Minami Shibuya-ku, Tokyo 150-0022 Tel: 81.3.3760.3110 Fax: 81.3.3760.3101

# Yokohama-City Innotech

2-15-10 Shin Yokohama Kohoku-ku

Yokohama-City, 222-8580 Tel: 81.45.474.9037 Fax: 81.45.474.9065

### **Macnica Corporation**

Hakusan High-Tech Park 1-22-2 Hadusan, Midori-Ku, Yokohama-City, 226-8505 Tel: 81.45.939.6140 Fax: 81.45.939.6141

### The Netherlands

Eindhoven
Acal Nederland b.v.

### Beatrix de Rijkweg 8 5657 EG Eindhoven

Tel: 31.40.2.502602 Fax: 31.40.2.510255

### Switzerland

Brugg LSI Logic Sulzer AG Mattenstrasse 6a

CH 2555 Brugg Tel: 41.32.3743232 Fax: 41.32.3743233

### Taiwan

Taipei

### Avnet-Mercuries Corporation, Ltd

14F, No. 145, Sec. 2, Chien Kuo N. Road Taipei, Taiwan, R.O.C. Tel: 886.2.2516.7303 Fax: 886.2.2505.7391

### **Lumax International**

Corporation, Ltd 7th Fl., 52, Sec. 3 Nan-Kang Road Taipei, Taiwan, R.O.C. Tel: 886.2.2788.3656 Fax: 886.2.2788.3568

# Prospect Technology Corporation, Ltd

4FI., No. 34, Chu Luen Street Taipei, Taiwan, R.O.C. Tel: 886.2.2721.9533 Fax: 886.2.2773.3756

# Wintech Microeletronics Co., Ltd

7F., No. 34, Sec. 3, Pateh Road Taipei, Taiwan, R.O.C. Tel: 886.2.2579.5858 Fax: 886.2.2570.3123

### United Kingdom

Maidenhead
Azzurri Technology Ltd

16 Grove Park Business Estate Waltham Road White Waltham Maidenhead, Berkshire SL6 3LW

Tel: 44.1628.826826 Fax: 44.1628.829730

# Milton Keynes Ingram Micro (UK) Ltd

Garamonde Drive Wymbush Milton Keynes Buckinghamshire MK8 8DF Tel: 44.1908.260422

# Swindon EBV Elektronik

12 Interface Business Park Bincknoll Lane Wootton Bassett, Swindon, Wiltshire SN4 8SY Tel: 44.1793.849933 Fax: 44.1793.859555

◆ Sales Offices with Design Resource Centers