# MCM69C232


# Advance Information **4K x 64 CAM**

The MCM69C232 is a flexible content–addressable memory (CAM) that can contain 4096 entries of 64 bits each. The widths of the match field and the output field are programmable, and the match time is designed to be 160 ns. As a result, the MCM69C232 is well suited for datacom applications such as Virtual Path Identifier/Virtual Circuit Identifier (VPI/VCI) translation in ATM switches up to OC12 (622 Mbps) data rates and Media Access Control (MAC) address lookup in Ethernet/Fast Ethernet bridges. The match duty cycle of the MCM69C232 is user defined, with a trade–off between the time between matches and the number of new entries added to the CAM per second.

- 4096 Entries
- 160 ns Match Time
- Mask Register to "Don't Care" Selected Bits
- Depth Expansion by Cascading Multiple Devices
- 50 MHz Maximum Clock Rate
- Programmable Match and Output Field Widths
- Concurrent Matching of Virtual Path Circuits and Virtual Connection Circuits in ATM Mode
- Separate Ports for Control and Match Operations
- 200 ns Insertion Time if One of Twelve Entry Queue Locations is Empty
- 12 ms Initialization Time After Fast Insertion (at Power–Up Only)
- Single 3.3 V  $\pm$  5% Supply
- 100 Pin TQFP Package
- IEEE Standard 1149.1 Test Port (JTAG)

#### **Related Products**

- MCM69D536, MCM69D618 (Dual I/O, Dual Address RAMs)
- MCM67Q709A, MCM67Q909 (Separate I/O RAMs)
- MCM69C432 (CAM)

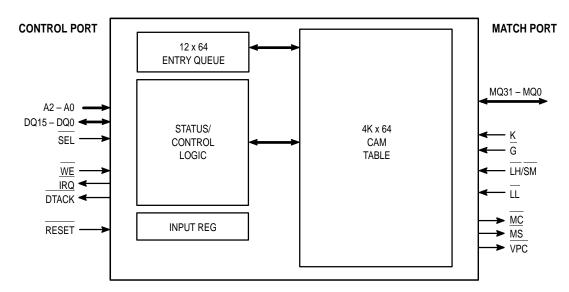

This document contains information on a new product. Specifications and information herein are subject to change without notice.




# TQ PACKAGE TQFP CASE 983A-01

© Motorola, Inc. 1998

REV 3 1/15/98

### **PIN ASSIGNMENT**

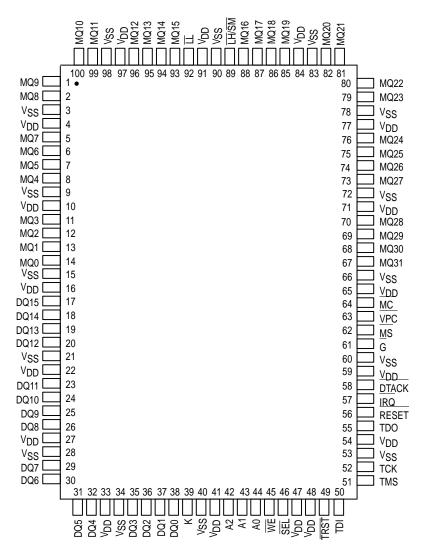

## **PIN DESCRIPTIONS**

Pin Locations	Symbol	Туре	Description
42 – 44	A2 – A0	Input	3-bit control port address bus.
58	DTACK	Output	Control port data transfer acknowledge (Open Drain).
17 – 20, 23 – 26, 29 – 32, 35 – 38	DQ15 – DQ0	I/O	16-bit bidirectional control port data bus.
61	G	Input	Asynchronous Output Enable control of MQ31 – MQ0.
57	IRQ	Output	Control port interrupt (Open Drain).
39	к	Input	Interface Clock, max frequency of 50 MHz.
89	LH/SM	Input	Latch High/Start Match. Initiates match sequence on match data present on MQ31 – MQ0.
92	LL	Input	Latch Low. Latches low order bits if match width is > 32 bits.
64	MC	Output	Match Complete (Open Drain).
62	MS	Output	Match Successful (Open Drain).
67 - 70, 73 - 76, 79 - 82, 85 - 88, 93 - 96, 99, 100, 1, 2, 5 - 8, 11 - 14	MQ31 – MQ0	I/O	32-bit common I/O CAM data. Used for input of match RAM and data RAM values.
56	RESET	Input	Resets chip to a known state.
46	SEL	Input	Control port chip select, active low.
52	TCK	Input	Test Clock, part of JTAG interface.
50	TDI	Input	Test Data In, part of JTAG interface.
55	TDO	Output	Test Data Out, part of JTAG interface.
51	TMS	Input	Test Mode Select, part of JTAG interface.
49	TRST	Input	TAP Reset part of JTAG interface.
63	VPC	Output	Virtual Path Circuit. Used in ATM mode to indicate a virtual path circuit match has occurred (Open Drain).
45	WE	Input	Control port Write Enable.
4, 10, 16, 22, 27, 33, 41, 47, 48, 54, 59, 65, 71, 77, 84, 91, 97	V <sub>DD</sub>	Supply	Power Supply: 3.3 V $\pm$ 5%.
3, 9, 15, 21, 28, 34, 40, 53, 60, 66, 72, 78, 83, 90, 98	VSS	Supply	Ground.

#### ABSOLUTE MAXIMUM RATINGS (See Note 1)

Rating	Symbol	Value	Unit
Supply Voltage (see Note 2)	V <sub>DD</sub>	4.6	V
Voltage Relative to $V_{SS}$ (see Note 2)	Vin	$-0.5$ to V_DD + 0.5 V	V
Output Current per Pin	l <sub>out</sub>	± 20	mA
Package Power Dissipation (see Note 3)	PD	—	W
Temperature Under Bias (see Note 3)	T <sub>bias</sub>	- 10 to 85	°C
Operating Temperature (see Note 4)	Т <sub>А</sub>	0 to 70	°C
Storage Temperature	T <sub>stg</sub>	– 55 to 125	°C

This device contains circuitry to protect the inputs against damage due to high static voltages or electric fields; however, it is advised that normal precautions be taken to avoid application of any voltage higher than maximum rated voltages to this high–impedance circuit.

NOTES:

1. Permanent device damage may occur if ABSOLUTE MAXIMUM RATINGS are exceeded. Functional operation should be restricted to RECOMMENDED OPER-ATING CONDITIONS. Exposure to higher than recommended voltages for extended periods of time could affect device reliability.

2. All voltages are referenced to  $V_{SS}$ .

3. Power dissipation capability will be dependent upon package characteristics and use environment. See Package Thermal Characteristics.

4. Consult Junction to Ambient Thermal Characteristics table for details and conditions.

# DC OPERATING CONDITIONS AND CHARACTERISTICS

 $(V_{DD} = 3.3 \text{ V} \pm 5\%, \text{T}_{J} = 20 \text{ to } 120^{\circ}\text{C}, \text{ Unless Otherwise Noted})$ 

#### **RECOMMENDED OPERATING CONDITIONS** (Voltages Referenced to V<sub>SS</sub> = 0 V)

Parameter	Symbol	Min	Тур	Max	Unit
Power Supply Voltage	V <sub>DD</sub>	3.1	3.3	3.5	V
Operating Temperature (Junction)	ТJ	20	_	120	°C
Input Low Voltage	VIL	- 0.5*	0	0.8	V
Input High Voltage	VIH	2.0	3	5.5	V

\* V<sub>IL</sub> (min) = -3.0 V ac (pulse width  $\leq 20$  ns).

#### DC CHARACTERISTICS AND SUPPLY CURRENTS

Parameter	Symbol	Min	Max	Unit
Active Power Supply Current @ 20°C TJ	IDD1	_	575	mA
Active Power Supply Current @ 120°C TJ	I <sub>DD2</sub>	_	460	mA
Input Leakage Current (0 V $\leq$ V <sub>in</sub> $\leq$ V <sub>DD</sub> )	I <sub>lkg</sub> (I)	_	TBD	μΑ
Output Leakage Current (0 V $\leq$ V <sub>in</sub> $\leq$ V <sub>DD</sub> )	I <sub>lkg</sub> (O)	_	TBD	μΑ
Output Low Voltage (I <sub>OL</sub> = 8 mA)	VOL	_	0.4	V
Output High Voltage (I <sub>OH</sub> = - 4 mA)	VOH	2.4	_	V

#### PACKAGE THERMAL CHARACTERISTICS

Rating	Symbol	Max	Unit
Thermal Resistance Junction to Ambient (200 lfpm, 4 Layer Board) (Note 2)	$R_{ hetaJA}$	27.1	°C/W
Thermal Resistance Junction to Board (Bottom) (Note 3)	$R_{\theta JB}$	17	°C/W
Thermal Resistance Junction to Case (Top) (Note 4)	R <sub>θJC</sub>	9	°C/W

NOTES:

1. RAM junction temperature is a function of on-chip power dissipation, package thermal impedance, mounting site temperature, and mounting site thermal impedance.

2. Per SEMI G38-87.

3. Indicates the average thermal impedance between the die and the mounting surface.

4. Indicates the average thermal impedance between the die and the case top surface. Measured via the cold plate method (MIL SPEC-883 Method 1012.1).

#### CAPACITANCE (Periodically Sampled Rather Than 100% Tested)

Parameter	Symbol	Min	Max	Unit
Input Capacitance	C <sub>in</sub>	—	5	pF
I/O Capacitance	C <sub>I/O</sub>	—	8	pF

## JUNCTION TO AMBIENT THERMAL CHARACTERISTICS

Board	Air (LFPM)	θ <sub>JA</sub> (°C/W)	Maximum Ambient Temperature (°C)
1 Layer	0	40.1	55.8
1 Layer	200	34.7	64.4
1 Layer	400	32.1	68.7
4 Layer	0	30.5	71.1
4 Layer	200	27.1	76.6
4 Layer	400	25.6	79.0

# AC OPERATING CONDITIONS AND CHARACTERISTICS

 $(V_{DD} = 3.3 \text{ V} \pm 5\%, \text{T}_{J} = 20 \text{ to } 120^{\circ}\text{C}, \text{ Unless Otherwise Noted})$ 

Input Timing Measurement Reference Level	1.5 V
Input Pulse Levels	0 to 3.0 V
Input Rise/Fall Time	3 ns

 Output Timing Reference Level
 1.5 V

 Output Load
 Figure 1 Unless Otherwise Noted

#### CONTROL PORT AND MATCH PORT TIMINGS

(Voltages Referenced to  $V_{SS} = 0$  V, Max's are t<sub>KHKH</sub> Dependent and Listed Values are for t<sub>KHKH</sub> = 20 ns)


Parameter	Symbol	Min	Max	Unit
CONTROL PORT TIMING				
Address Valid to SEL Low	<sup>t</sup> AVSL	0	—	ns
DTACK Low to Address Invalid	<sup>t</sup> DTLAX	0	_	ns
Data Valid to Select Low	<sup>t</sup> DVSL	0	—	ns
DTACK Low to Data Invalid	<sup>t</sup> DTLDX	0	—	ns
Output Valid to DTACK Low	<sup>t</sup> QVDTL	2	—	ns
WE Valid to Select Low	twvsL	0	—	ns
DTACK Low to WE High	<sup>t</sup> DTLWH	0	—	ns
WE High to Output Active	twhqx	TBD	—	ns
Select Low to DTACK Low*	<sup>t</sup> SLDTL	10	—	ns
Select High to DTACK High	<sup>t</sup> SHDTH	10	30	ns
DTACK Low to IRQ Low	<sup>t</sup> DTLIL	TBD	—	ns
IRQ Low to IRQ High	tilih	20	—	ns
DTACK Low to Select High	<sup>t</sup> DTLSH	0	—	ns
DTACK High to Select Low	<sup>t</sup> DTHSL	0	—	ns
Address Valid to Output Valid	tAVQV	_	8	ns
Select High to Output Three–State	<sup>t</sup> SHQZ	_	8	ns

\* DTACK is delayed when a write is attempted during certain operations. See Functional Description.


#### CONTROL PORT AND MATCH PORT TIMINGS

(Voltages Referenced to  $V_{SS} = 0$  V, Max's are t<sub>KHKH</sub> Dependent and Listed Values are for t<sub>KHKH</sub> = 20 ns)

Parameter	Symbol	Min	Max	Unit
MATCH PORT TIMING				
Clock Cycle Time	<sup>t</sup> кнкн	20	250	ns
Clock High Time	<sup>t</sup> KHKL	8	242	ns
Clock Low Time	<sup>t</sup> KLKH	8	242	ns
Clock High to LHSM or LL Low	<sup>t</sup> KHLL	—	7	ns
Clock High to LHSM or LL High	<sup>t</sup> KHLH	—	7	ns
MQ Input Data Setup Time to Clock High	<sup>t</sup> MQVKH	8	—	ns
Clock High to Match Data Hold Time	<sup>t</sup> KHMQX	2	_	ns
Clock High to MQ Valid	<sup>t</sup> KHMQV	—	12	ns
Clock High to MC High	<sup>t</sup> КНМСН	—	5	ns
Clock High to MC Low	<sup>t</sup> KHMCL	—	5	ns
Clock High to MS Low	<sup>t</sup> KHMSL	—	12	ns
Clock High to MS High	<sup>t</sup> KHMSH	_	5	ns
Clock High to VPC Low	<sup>t</sup> KHVPL	_	12	ns
Clock High to VPC High	<sup>t</sup> KHVPH	_	5	ns
G Low to MQ Active	<sup>t</sup> GLMQX	3.8	_	ns
G High to MQ High–Z	<sup>t</sup> GHMQZ	_	4	ns
LH/SM Low to LH/SM Low	<sup>t</sup> SMSM	10	_	cycles

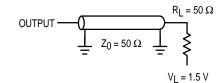



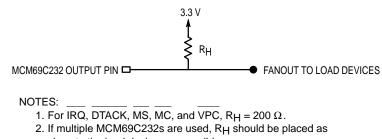

close to the load devices as possible.

Figure 2. Pullup for Open Drain Outputs

#### FUNCTIONAL DESCRIPTION

The MCM69C232 is a flexible content-addressable memory (CAM) that can contain 4096 entries of 64 bits each. The widths of the match field and the output field are programmable, and the match time is designed to be 160 ns. As a result, the MCM69C232 is well suited for datacom applications such as Virtual Path Identifier/Virtual Circuit Identifier (VPI/VCI) translation in ATM switches up to OC12 (622 Mbps) data rates and Media Access Control (MAC) address lookup in Ethernet/Fast Ethernet bridges. The match duty cycle of the MCM69C232 is determined by the user, with a trade-off between the match cycle time and the number of entries added to/deleted from the CAM. With the minimum required 40 ns of idle time between matches, a typical value of 2440 insertions or deletions per second can be made. See Figure 3 for a graph of the relationship between insertion/deletion pairs and match cycle time.

In its basic operating mode, the MCM69C232 reads a data input word and compares it to all the <u>entries</u> in its CAM table. Whether a match is found or not, the MC pin is asserted after <u>the</u> comparisons have been made. If a match is found, the MS pin is asserted, and the data associated with the matching entry is output on the MQ bus. If no match is found, the MQ bus remains in a high impedance state to facilitate depth expansion via the cascading of multiple CAMs.

Before the basic operating mode can be entered, however, several start-up functions must be performed. First, the output width and match width must be designated by setting the global-mask register. Second, a choice must be made between buffered entry mode and fast entry mode. Next, the match/output data pairs must be loaded into the table. Depending on the entry mode of choice, the table may have to be initialized. Optionally, the "almost full" point may be set to provide warning of impending table overflow.

The input bits to be compared are defined by the globalmask register. The mask bits that are 0 correspond to the bits that are used in the match operation. Typically, the bits that are used in matching are the high order bits in the 64 bit CAM table entries, and the bits that are used as outputs are the low order bits. While any of the bits can be defined as match bits, the low order 32 bits of an entry are always driven on the MQ bus as output data.

The choice of entry mode is a trade–off between speed of entry and latency before matching operations can begin. In a typical application, the fast entry mode will be used to load the initial values into the CAM table. Subsequently, the initialize–table operation, which takes 12 ms, must be executed to establish the required linkages and relationships among the entries. After match operations have begun, the buffered entry mode should be used to enter new values dynamically; even one addition in fast entry mode will disable matching until the table is reinitialized. Table insertions using the buffered entry mode and the fast entry mode actually take the same amount of time unless the entry queue is full. The capacity of the queue is 12 entries. After the entry mode choice is made, the table can be loaded. Each 64 bit entry is constructed by writing a 16 bit value to each of the four I/O registers in the MCM69C232. The insertion can then be processed. After all the start–up entries have been loaded into the CAM table, the initialization operation is run if required. Normal matching operations can then begin. A delete operation is provided to remove stale data from the CAM table.

Several error codes are defined in the details of the instruction set. When an error occurs, its corresponding code is written into the error register and the error bit in the flag register is set. The error bit is cleared and the error register is set to  $FFFF_{16}$  by the next write to the operation register.

#### **PROGRAMMING MODEL**

Three types of registers are accessible through the MCM69C232's control port: I/O registers, an operation register, and result/condition code registers. Each register is sixteen bits in length.

REGISTER NAME	BIT NUMBER	ADDRESS OFFSET
I/O REGISTER 0		0
I/O REGISTER 1		1
I/O REGISTER 2		2
I/O REGISTER 3		3
OPERATION REGISTER		4
FLAG REGISTER		5
ERROR CODE REGISTER		6
INTERRUPT REGISTER		7

#### FLAG BIT DEFINITIONS

- Bit 0: 1 = At least one Interrupt enabled,
  - 0 = No interrupts generated
- Bit 1: 1 = Last control port match successful,
- 0 = Last match unsuccessful
- Bit 2: 1 = Table initialized, 0 = Table not initialized
- Bit 3: 1 = Buffered entry mode, 0 = Fast entry mode
- Bit 4: 1 = Entry queue empty,
  - 0 = Entry queue not empty
- Bit 5: 1 = Entry queue full, 0 = Entry queue not full
- Bit 6: 1 = CAM table full, 0 = CAM table not full
- Bit 7: 1 = Error condition set, 0 = No error
- Bit 8: 1 = Table almost full, 0 = Table not almost full
- Bit 9: 1 = ATM mode, 0 = Standard mode
- Bit 10: 1 = Last operation complete, 0 = Not yet complete

#### INTERRUPT BIT DEFINITIONS

Bit 0:	1 = Enable interrupt on insert with full entry
	queue
Bit 1:	1 = Enable interrupt on insert with full table
Bit 2:	1 = Enable interrupt on completion of
	CHECK–FOR–VALUE instruction
Bit 3:	1 = Enable interrupt on completion of
	INITIALIZE-TABLE instruction
Bit 4:	1 = Enable interrupt on failed attempt to enter
	fast entry mode
Bit 5:	1 = Enable interrupt on CAM table reaching
	almost-full point

- Bit 6: 1 = Enable interrupt on fast read with non-empty queue
- Bit 7: 1 = Enable interrupt on illegal instruction

# INSTRUCTION SET DETAILS

The MCM69C232 is prepared for match operations by writing to data and instruction registers via the control port. In the general case, required data is loaded into I/O registers 0-3, then an instruction is issued by writing an operation code to the instruction register. As a result of running an instruction, the CAM table can be modified, bit(s) can be set in the flag register, error codes can be returned in the error code register, and an interrupt can be generated if enabled. For a particular condition to generate an interrupt, the interrupt register bit specific to that condition must be set. The user should verify that the operation-complete bit of the flag register is set before executing the next instruction, if the instruction just executed is one that modifies I/O registers.

Operation	Description	OP Code (Base 16)	
INSERT VALUE	Loads a new entry into the CAM table	0000 or 000F	
DELETE VALUE	Removes an entry from the CAM table	0001 or 000E	
CHECK FOR VALUE	Runs a match cycle via the control port	0006	
INITIALIZE TABLE	Prepares CAM table for matching	000B	
FAST ENTRY MODE	Selects entry mode suited for initial CAM table load	0004	
BUFFERED ENTRY MODE	Selects entry mode suited for simultaneous loading and matching	0005	
SET ATM MODE	Enter mode that provides concurrent VPC/VCC search	0008	
RETURN ENTRY COUNT	Determines number of entries in CAM	0003	
SET GLOBAL MASK REGISTER	Determines match bits to be checked in a match operation	0002 or 000D	
SET ALMOST-FULL POINT	Defines CAM almost full condition	0007	
SET FAST-READ REGISTER	Defines table entry that is output by the fast read operation	0009	
FAST READ	Outputs one CAM table entry	000A	

## Table 1. MCM69C232 Operation Summary

#### **INSERT VALUE**

This instruction is used to load a new match/output value into the CAM. The contents of I/O registers 0 - 3 are concatenated, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit.

If the MCM69C232 is running in buffered entry mode, the resulting 64 bit value is written to the first available location in the entry queue, and is immediately available for matching. If a buffered insert-value instruction is attempted when the entry queue is full (indicated by bit 5 of the flag register = 1), no value is written, an error code of FFF8<sub>16</sub> is returned in the error code register, and the error-condition flag (bit 7) is set in the flag register. An interrupt is generated, if enabled by bit 0 of the interrupt register being set.

If the MCM69C232 is running in fast entry mode, the concatenated 64 bit value is written directly to the CAM array. If an insert-value instruction is attempted when in fast entry mode and the table is full, no value is written, an error code of FFF916 is returned in the error code register, and the errorcondition flag (bit 7) is set in the flag register. (The table-full

8

condition is indicated by bit 6 of the flag register being set.) An interrupt is generated, if enabled by bit 1 of the interrupt register being set.

Only one entry is allowed for a given match pattern. If an entry is made in the table that duplicates an existing match pattern, it will overwrite the entry already in the CAM table, if the CAM is in buffered entry mode. The user must ensure that no entries with the same match pattern are inserted in fast entry mode.

#### **DELETE VALUE**

This instruction is used to remove a match/output value from the CAM. The contents of I/O registers 0 - 3 are concatenated, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit. The bits that have a 0 in the corresponding bit of the global-mask register are used to find a matching entry in the CAM table. If such an entry is found, it is invalidated. Note that any bit that is not a match bit as defined by the mask register is ignored for this operation. The operation of the MCM69C232 guarantees that no more than one matching entry can exist in the table,

unless they were accidently loaded using fast entry mode. This must be avoided by the user, as the results of subsequent matches and deletes will be undefined.

Example:	I/O Register 0 =	3020 <sub>16</sub>
	I/O Register 1 =	000016
	I/O Register 2 =	543A16
	I/O Register 3 =	FE5516
	Concatenated value =	FE55543A0000302016
	Global Mask Register =	C000000FFFFFFF16

Of the high–order 32 bits, the rightmost 30 bits are cared by the global–mask register. Therefore, the MCM69C232 will delete an entry, if it exists, which has a value of  $3E55543A_{16}$  in bits 61 - 32.

#### CHECK FOR VALUE

This instruction checks for a matching value in the CAM table. The contents of I/O registers 0 - 3 are concatenated, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit. The bits that have a 0 in the corresponding bit of the global–mask register are used to find a matching entry in the CAM table. If such an entry is found, the last–match–successful bit of the flag register is set. In addition, the matching entry is written to I/O registers 0 - 3, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit

If no match is found, the last-match-successful bit is cleared. An interrupt is generated regardless of the result, if enabled by bit 2 of the interrupt register, when the operation has been completed. The operation of the MCM69C232 guarantees that no more than one matching entry can exist in the table. If uninterrupted by match port activity, the check for value instruction will finish in 8 clock cycles.

#### **INITIALIZE TABLE**

If fast entry mode has been used to load the CAM table, the initialize-table operation must be used to establish the needed relationships and linkages between the entries in the table before matching can proceed. Upon completion, this operation sets the table-initialized bit in the flag register, and generates an interrupt if enabled by bit 3 of the interrupt register. It also sets the buffered entry mode bit in the flag register. This operation makes the programming model's registers read-only for up to 12 ms after the acknowledgment of the op code write cycle.

#### FAST ENTRY MODE

This instruction is used to enter the fast–entry mode. When the MCM69C232 is in this mode, insert–value operations bypass the entry queue and write new table entries directly to the CAM table. The fast–entry mode can only be entered while the entry queue is empty, as reflected by the queue–empty flag being set (bit 4 of the flag register.) If this operation is attempted while the entry queue is not empty, the value FFFA<sub>16</sub> is written to the error code register, the error–condition flag (bit 7) is set in the flag register, and an interrupt is generated if enabled by bit 4 of the interrupt register. If this mode is used to enter data, the initialize-table operation must be executed before matching operations can begin. The entry-mode bit and the table-initialized bit of the flag register (bit 3) are cleared by this operation.

#### **BUFFERED ENTRY MODE**

This instruction is used to enter the buffered–entry mode. When the MCM69C232 is in this mode, insert–value and delete–value operations utilize the entry queue. This mode can be entered at any time. Table entries are available for match operations immediately, without running the initialize– table operation, if all entries are made in this mode. Note that if both modes have been used to input data, none of the entries are available for matching until the initialize–table operation is executed. Conflicting table and queue values are resolved in favor of the latest entry in the queue. For example, if there is an entry in the CAM, a corresponding delete–entry in the queue, and a later insert–entry in the queue (all with the same match data), the queued insert– entry will return a match value.

#### **RETURN ENTRY COUNT**

This operation is used to determine the number of valid entries in the MCM69C232. The value is returned in I/O register 0, and reflects the sum of the number of valid entries in the CAM table and the inserts in the entry queue.

#### SET GLOBAL MASK REGISTER

This operation is used to indicate the bits to be used in performing matches. A 1 indicates that a bit should be ignored in the match operation, while a 0 indicates that a bit should be used in the match operation.

When this operation is executed, the contents of I/O registers 0 - 3 are concatenated, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit. The resulting 64 bit value is written to the global-mask register.

This operation should be executed before entering required values into the CAM table. Otherwise, the initialize– table instruction must be executed if the global mask register is changed after data is loaded into the CAM.

#### SET ALMOST-FULL POINT

This operation is used to define the "almost–full" condition in the CAM table. The 12 low–order bits of I/O register 0 are copied to the almost–full–point register. If an entry is added to the MCM69C232 (via the insert–value operation) that causes the valid–entry count to equal the almost–full–point, then bit 8 of the flag register is set, and an interrupt is generated if enabled by bit 5 of the interrupt register. The value of the almost–full register can be changed dynamically during match operations. For example, it could first be set to 2048 to generate an interrupt when the table is half full. When that point is reached, the register could be reprogrammed to 3072 to provide warning that the table has become three– quarters full. The almost–full interrupt is generated, if enabled, based on the number of entries in the CAM table. Entries in the queue are not included in the count.

#### SET FAST-READ REGISTER VALUE

This operation defines the table address that is output by the fast read operation. The least significant 12 bits of I/O register 0 are copied to the register. The queue must be empty when this instruction is executed.

#### FAST READ

This operation is used to output the contents of one entry in the CAM table. The fast-read register is used to specify the appropriate entry, and is then auto-incremented. As a result, successive execution of multiple fast-read operations will provide access to contiguous entries in the CAM table.

The CAM entry is copied to I/O registers 0 - 3, with bit 15 of register 3 as the most significant bit, and bit 0 of register 0 as the least significant bit.

The fast-read instruction can only be executed while the entry queue is empty, as reflected by the queue–empty flag being set (bit 4 of the flag register.) If this operation is attempted while the entry queue is not empty, the value  $FFFC_{16}$  is written to the error code register, the error–condition flag (bit 7) is set in the flag register, and an interrupt is generated if enabled by bit 7 of the interrupt register.

#### SET ATM MODE

When the MCM69C232 is placed in ATM mode, it provides simultaneous searching for virtual path circuits (VPCs) and virtual connection circuits (VCCs). A VCC is detected when both the virtual path identifier (VPI) and the virtual circuit identifier (VCI) of an incoming cell match an entry in the CAM. A VPC match occurs when the VPI of an incoming cell matches the VPI field of a CAM entry that has all 1s <u>as its</u> VCI. A VPC match <u>is</u> signalled by the assertion of the VPC pin along with the MS pin. At 50 MHz, a match is completed in 160 ns, whether the applied VPI/VCI belongs to a VCC or a VPC.

The VCI match field must be defined as bits 32 - 47 of each entry, and the VPI match data must occupy bits 48 - 59. The VPI can be limited to bits 48 - 55, if the switch handles only User–Network Interface (UNI) protocols. The mask register should be used to "don't care" any unused bits beyond the VPI field. Entering ATM mode will set bit 9 of the flag register.

To load a VPC into the CAM table, the desired VPI value is written (right justified) to I/O register 3, FFFF<sub>16</sub> is written to I/O register 2 as the VCI field, the upper half of the desired output word is written to I/O register 1, and the lower half of the desired output word is written to I/O register 0. Then, the "INSERT VALUE" instruction is written to the operation register.

When performing a match operation, the VCI must be placed in bits 0 - 15 of the MQ port. The VPI is expected on bits 16 - 27, or bits 16 - 23 in the UNI case.

Buffered entry mode insertions and deletions are modified in the following way when the MCM69C232 is in ATM mode. If you try to add a VCC with the same VPI as an existing VPC, you overwrite the VPC. If you try to delete a VCC when the VCC is not in the table, but a VPC with that VPI is in the table, the VPC will be deleted.

#### MATCH CYCLE TIME

At 50 MHz, the MC<u>M6</u>9C232 completes a match 160 ns after assertion of the SM signal. If minimal entries need to be added to or deleted from th<u>e C</u>AM, the part can be cycled at 200 ns. In other words, SM can be asserted again immediately after the completion of a match operation and data output.

However, idle time is required between matches to allow insertions or deletions. The worst case occurs if an entry with a match data value smaller than any other entry in the CAM is continually added and dropped from the table. The number of insertion/deletion pairs per second in this scenario is shown versus match cycle time as the curve labeled "Worst Case" in Figure 3. As shown, a match cycle time of 200 ns allows for 610 insertion/deletion pairs per second. Note that this analysis is based on a 50 MHz input clock. Values should be derated in proportion to any decrease in clock speed. For example, at 25 MHz, twice as much idle time is required to achieve the same number of insertion/deletion pairs per second.

A more typical case would consist of either randomly placed insertions and deletions in the CAM table (as determined by the magnitude of the match field), or when insertions occur at one end of the table and deletions occur at the other end. The number of insertion/deletion pairs per second in this scenario is shown versus match cycle time as the curve labeled "Typical" in Figure 3. As shown, a match cycle time of 200 ns allows for 1220 insertion/deletion pairs per second.

For any match cycle time  $\geq$  200 ns and evenly divisible by 20 ns (200 ns, 220 ns, 240 ns, ...), the time to perform a worst-case insertion *or* deletion is equal to 81,920\*MCT /(MCT-180) ns at 50 MHz, where MCT is the match cycle time in nanoseconds. In general, the time for an insertion or deletion is proportional to its distance from the end of the CAM table. That is, entries with the largest match values take the least time to insert or delete, while entries with the smallest values take the most time.

Therefore, the effective rate of insertion and deletion is maximized if the longest-lived entries are placed near the beginning of the table and the shortest-lived entries are placed near the end of the table. For an ATM application, this would correspond to the assignment of small VPI values to permanent virtual circuits and large VPI values to switched virtual circuits.

Note that at start–up, when entries are loaded into the CAM via the fast–entry mode, the process is dominated by the time it takes to execute the initialization instruction that follows. The resulting effective rate of loading the CAM at start–up is approximately 270,000 entries per second.

#### RESET

Asserting RESET removes all entries from the CAM table and entry queue. The flag register is set to  $1C_{16}$  (setting the queue empty, buffered entry mode, and table initialized bits). The error register is set to FFFF<sub>16</sub>, indicating no errors. Finally, the almost full register is set to FFF<sub>16</sub>.

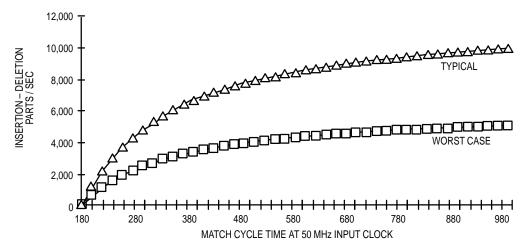


Figure 3. Connections per Second vs Match Cycle Time

#### **TIMING OVERVIEW**

#### **CONTROL PORT**

The control port of the MCM69C232 is asynchronous. Data transfers, <u>both</u> read and write, are initiated by the assertion of the SEL signal. Address values should be valid, and WE should be high, when SEL is asserted to begin a read cycle. All values (address, <u>WE</u>, and SEL) should be held until the MCM69C232 asserts DTACK to signal the end of the read cycle.

Address an<u>d data values should be valid</u>, and WE should be low, when SEL is asserted to begin a write cycle. Address, data, WE, and SEL<u>values</u> should be held until the MCM69C232 asserts DTACK to signal the end of the write cycle.

#### MATCH PORT

The MCM69C232's match port is synchronous in operation. When the match width is  $\leq$  32 bits, a match cycle can be initiated by presenting the match data on MQ31 – MQ0 and asserting the LH/SM signal with the appropriate setup time relative to the rising edge of the clock. The assertion of the MC output signifies the completion of the match cycle. If a match has been found, the  $\overline{\text{MS}}$  output is also asserted. If the match is a virtual path circuit match in ATM mode, the VPC output will be asserted with the MS <u>output</u>. Output data, if any, is enabled by the assertion of the G input.


If the match width is greater than 32 bits, the lower bits are first latched into the MCM69C232 by the LL input. The match cycle is then initiated as specified in the previous paragraph.


#### **DEPTH EXPANSION**

Multiple CAMs can be cascaded to increase the depth of the match table. The hardware requirements are very straightforward, as the following pins on each device are simply wired in parallel: A2 – A0, DQ15 – DQ0, WE, IRQ, DTACK, MQ31 – MQ0, K, G, LH/SM, MC, MS, and VPC. Four CAMs can be easily cascaded. Simulations show that eight devices can be cascaded if care is taken to minimize the length of the PC board traces connecting the CAMs.


The buffered entry mode prevents multiple matching entries in a single CAM. The check for value instruction should be used to verify that multiple matching entries will not result from a potential new entry. If a match is found in CAM 1, for example, the new value should be placed in CAM 1, where it will replace the existing entry.

#### DEPTH EXPANSION EXAMPLE CASCADING FOUR MCM69C232s FOR A 16K WORD TABLE

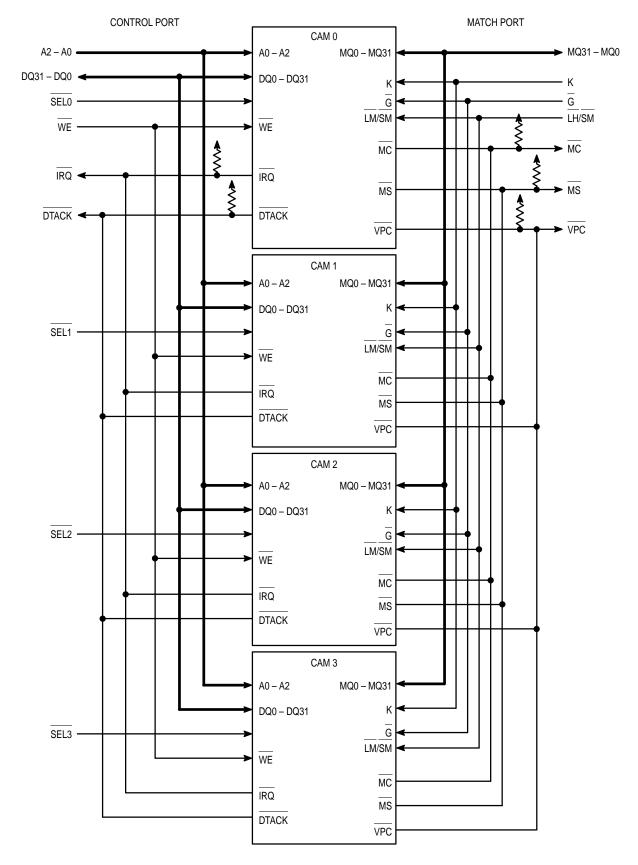

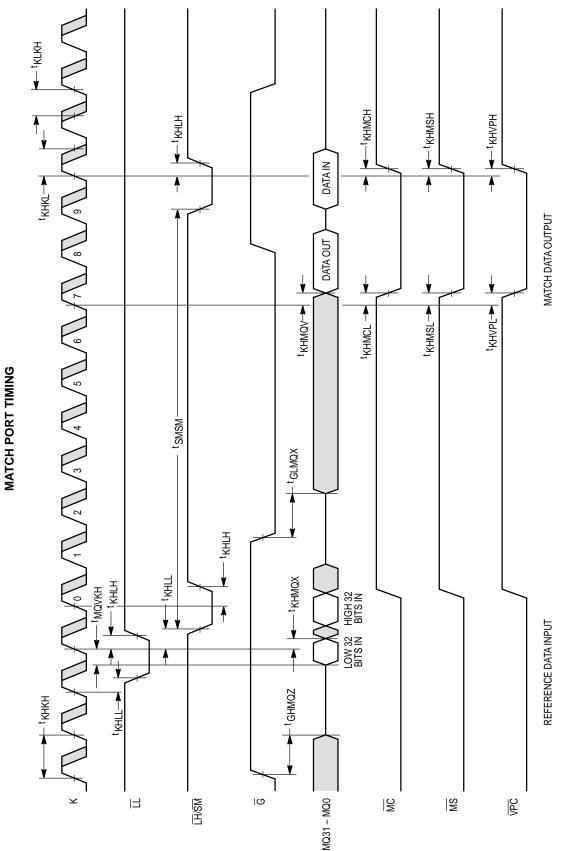



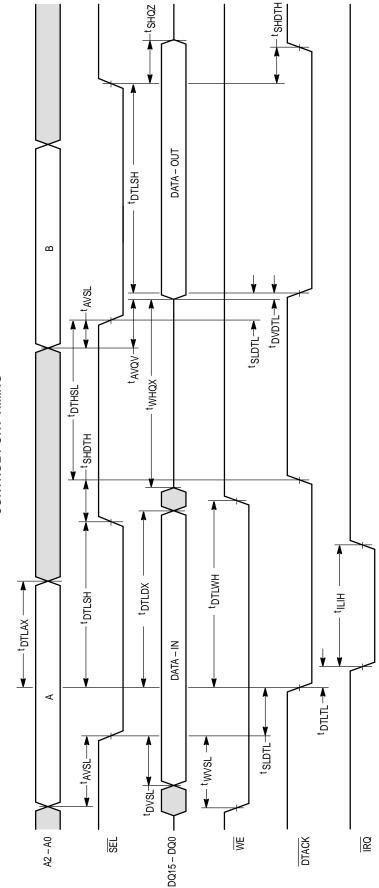



# JTAG

#### AC OPERATING CONDITIONS AND CHARACTERISTICS FOR THE TEST ACCESS PORT (IEEE 1149.1)

 $(T_J = 20 \text{ to } + 120^{\circ}\text{C}, \text{ Unless Otherwise Noted})$ 

Input Timing Measurement Reference Level 1.5 \	/
Input Pulse Levels 0 to 3.0 \	/
Input Rise/Fall Time 3 ns	s

Output Measurement Timing Level	1.5 V
Output Load	50 $\Omega$ Termination to 1.5 V

#### TAP CONTROLLER TIMING

		МСМ6	9C232		
Parameter	Symbol	Min	Max	Unit	Notes
Cycle Time	<sup>t</sup> CK	30	_	ns	
Clock High Time	<sup>t</sup> CKH	12	_	ns	
Clock Low Time	<sup>t</sup> CKL	12	_	ns	
Clock Low to Output Valid	tĄ	5	9	ns	
Clock Low to Output High–Z	<sup>t</sup> CKZ	0	9	ns	1
Clock Low to Output Active	<sup>t</sup> CKX	0	9	ns	2, 3
Setup Times: TMS 	ts tSD tSR	2 2 2	_	ns	
Hold Times: TMS 	<sup>t</sup> H <sup>t</sup> HD <sup>t</sup> HR	2 2 10	_	ns	

NOTES:

1. TDO will High–Z from a clock low edge depending on the current state of the TAP state machine.

2. TDO is active only in the SHIFT-IR and SHIFT-DR state of the TAP state machine.

3. Transition is measured  $\pm$  500 mV from steady-state voltage. This parameter is sampled and not 100% tested.

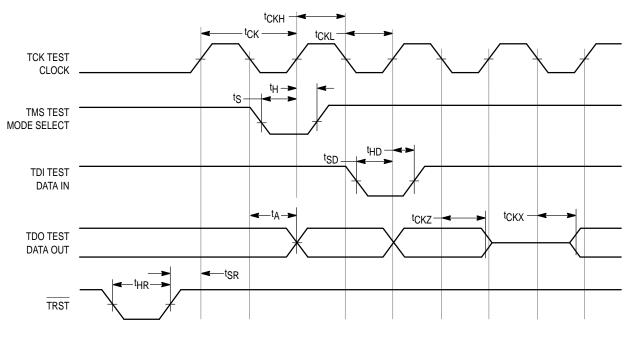


Figure 4. TAP Controller Timing

#### INSTRUCTION SET

A five pin IEEE Standard 1149.1 Test Port (JTAG) is included on this device. When the TAP (Test Access Port) controller is in the SHIFT–IR state, the instruction register is placed between TDI and TDO. In this state, the desired <u>instruction</u> would be serially loaded through the TDI input. TRST resets the TAP controller to the test–logic reset state. The TAP instruction set for this device are as follows.

Instruction	Code (Binary)	Description
BYPASS	1111*	Bypass instruction
SAMPLE/PRELOAD	0010	Sample and/or preload instruction
EXTEST	0000	Extest instruction
HIGHZ	1001	High–Z all output pins while bypass register is between TDI and TDO
CLAMP	1100	Clamp output pins while bypass register is between TDI and TDO

\* Default state at power-up.

#### SAMPLE/PRELOAD TAP INSTRUCTION

The SAMPLE/PRELOAD TAP instruction is used to allow scanning of the boundary–scan register without causing interference to the normal operation of the chip logic. The 62–bit boundary–scan register contains bits for all device signal and clock pins and associated control signals. This register is accessible when the SAMPLE/PRELOAD TAP instruction is loaded into the TAP instruction register in the SHIFT–IR state. When the TAP controller is then moved to the SHIFT–DR state, the boundary–scan register is placed between TDI and TDO. This scan register can then be used prior to the EXTEST instruction to preload the output pins with desired values so that these pins will drive the desired state when the EXTEST instruction is loaded. As data is written into TDI, data also streams out TDO which can be used to pre–sample the inputs and outputs.

SAMPLE/PRELOAD would also be used prior to the CLAMP instruction to preload the values on the output pins that will be driven out when the CLAMP instruction is loaded.

#### EXTEST TAP INSTRUCTION

The EXTEST instruction is intended to be used in conjunction with the SAMPLE/PRELOAD instruction to assist in testing board level connectivity. Normally, the SAMPLE/ PRELOAD instruction would be used to preload all output pins. The EXTEST instruction would then be loaded. During EXTEST, the boundary–scan register is placed between TDI and TDO in the SHIFT–DR state of the TAP controller. Once the EXTEST instruction is loaded, the TAP controller would then be moved to the run–test/idle state. In this state, one cycle of TCK would cause the preloaded data on the output pins to be driven while the values on the input pins would be sampled. Note the TCK, not the clock pin (CLK), is used as the clock input while CLK is only sampled during EXTEST. After one clock cycle of TCK, the TAP controller would then be moved to the SHIFT–DR state where the sampled values would be shifted out of TDO (and new values would be shifted in TDI). These values would normally be compared to expected values to test for board connectivity.

#### **CLAMP TAP INSTRUCTION**

The CLAMP instruction is provided to allow the state of the signals driven from the output pins to be determined from the boundary–scan register while the bypass register is selected as the serial path between TDI and TDO. The signals driven from the output pins will not change while the CLAMP instruction is selected. EXTEST could also be used for this purpose, but CLAMP shortens the board scan path by inserting only the bypass register between TDI and TDO. To use CLAMP, the SAMPLE/PRELOAD instruction would be used first to scan in the values that will be driven on the output pins when the CLAMP instruction is active.

#### **HIGHZ TAP INSTRUCTION**

The HIGH–Z instruction is provided to allow all the outputs to be placed in an inactive drive state (high–Z). During the HIGH–Z instruction the bypass register is connected between TDI and TDO.

#### **BYPASS TAP INSTRUCTION**

The BYPASS instruction is the default instruction loaded at power up. This instruction will place a single shift register between TDI and TDO during the SHIFT–DR state of the TAP controller. This allows the board level scan path to be shortened to facilitate testing of other devices in the scan path.

#### **BOUNDARY SCAN REGISTER**

The boundary scan register is identical in length to the number of active input, output, and I/O connections on the device (not counting the TAP pins). The boundary scan register, under the control of the TAP controller, is loaded with the contents of the RAM I/O ring when the controller is in capture\_DR state and then is placed between the TDI and TDO pins when the controller is moved to shift\_DR state. Several TAP instructions can be used to activate the boundary scan register.

The Bit Scan Order table (Table 2) describes which device pin connects to each boundary scan register location. The first column defines the bit's position in the boundary scan register. The shift register bit at G (i.e., first to be shifted out) is defined as bit 1. The second column is the name of the pin, third column is the pin number and the fourth column is the pin type (input, output, or I/O).

# DISABLING THE TEST ACCESS PORT AND BOUNDARY SCAN

It is possible to use this device without utilizing the four pins used for the test access port. To circuit disable the device, TCK must be tied to  $V_{SS}$  to preclude mid level inputs. Although TDI and TMS are designed in such a way that an undriven input will produce a response equivalent to the application of a logic 1, it is still advisable to tie these inputs to  $V_{DD}$  through a 1K resistor. TDO should remain unconnected.

Bit Number	Bit Pin Name	Bit Pin Number	Pin Type	Bit Number	Bit Pin Name	Bit Pin Number	Pin Type
1	G	61	Input	32	MQ6	6	I/O
2	MS	62	Output	33	MQ5	7	I/O
3	VPC	63	Output	34	MQ4	8	I/O
4	MC	64	Output	35	MQ3	11	I/O
5	MQ31	67	I/O	36	MQ2	12	I/O
6	MQ30	68	I/O	37	MQ1	13	I/O
7	MQ29	69	I/O	38	MQ0	14	I/O
8	MQ28	70	I/O	39	DQ15	17	I/O
9	MQ27	73	I/O	40	DQ14	18	I/O
10	MQ26	74	I/O	41	DQ13	19	I/O
11	MQ25	75	I/O	42	DQ12	20	I/O
12	MQ24	76	I/O	43	DQ11	23	I/O
13	MQ23	79	I/O	44	DQ10	24	I/O
14	MQ22	80	I/O	45	DQ9	25	I/O
15	MQ21	81	I/O	46	DQ8	26	I/O
16	MQ20	82	I/O	47	DQ7	29	I/O
17	MQ19	85	I/O	48	DQ6	30	I/O
18	MQ18	86	I/O	49	DQ5	31	I/O
19	MQ17	87	I/O	50	DQ4	32	I/O
20	MQ16	88	I/O	51	DQ3	35	I/O
21	LH/SM	89	Input	52	DQ2	36	I/O
22	L	92	Input	53	DQ1	37	I/O
23	MQ15	93	I/O	54	DQ0	38	I/O
24	MQ14	94	I/O	55	A2	42	Input
25	MQ13	95	I/O	56	A1	43	Input
26	MQ12	96	I/O	57	A0	44	Input
27	MQ11	99	I/O	58	WE	45	Input
28	MQ10	100	I/O	59	SEL	46	Input
29	MQ9	1	I/O	60	RESET	56	Input
30	MQ8	2	I/O	61	IRQ	57	Output
31	MQ7	5	I/O	62	DTACK	58	Output

Table 2. Sample/Preload Boundary Scan Register Bit Definitions

#### TCK — TEST CLOCK (INPUT)

Clocks all TAP events. All inputs are captured on the rising edge of TCK and all outputs propagate from the falling edge of TCK.

#### TMS — TEST MODE SELECT (INPUT)

The TMS input is sampled on the rising edge of TCK. This is the command input for the TAP controller state machine. An undriven TMS input will produce the same result as a logic one input level.

#### TDI — TEST DATA IN (INPUT)


The TDI input is sampled on the rising edge of TCK. This is the input side of the serial registers placed between TDI and TDO. The register placed between TDI and TDO is determined by the state of the TAP controller state machine and the instruction that is currently loaded in the TAP instruction register (see Figure 5). An undriven TDI pin will produce the same result as a logic one input level.

## TDO — TEST DATA OUT (OUTPUT)

Output that is active depending on the state of the TAP state machine (see Figure 5). Output changes in response to the falling edge of TCK. This is the output side of the serial registers placed between TDI and TDO.

# TRST — TAP RESET

This device has a TRST pin. TRST is optional in IEEE 1149.1. Asserting the asynchronous TRST places the TAP controller in test–logic reset state. Test–logic reset state can also be entered by holding TMS high for five rising edges of TCK. This type of reset does not affect the operation of the system logic.

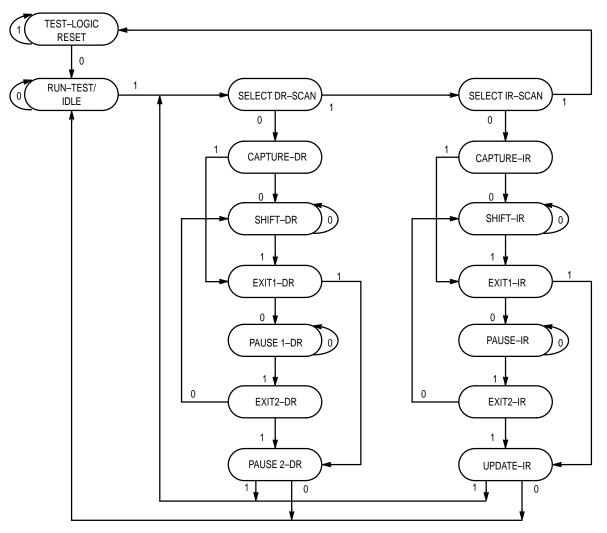

NOTE: The value adjacent to each state transition represents the signal present at TMS at the rising edge of TCK.

#### Figure 5. TAP Controller State Diagram

# **ORDERING INFORMATION**


(Order by Full Part Number)


	<u>MCM</u>	<u>69C232</u>	<u>XX</u>	<u>xx x</u>	
Motorola Memory Prefix					Blank = Trays, R = Tape and Reel
Part Number					Speed (20 = 20 ns)
					Package (TQ = TQFP)
Full Part N	umbers —	MCM69C232	TQ20	MCM69	C232TQ20R


Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part. Motorola and (M) are registered trademarks of Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.


#### PACKAGE DIMENSIONS

# **TQ PACKAGE** TQFP

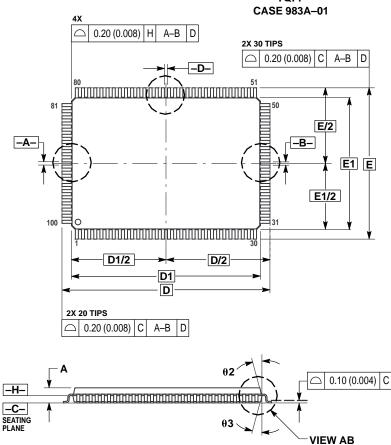

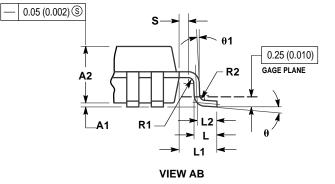

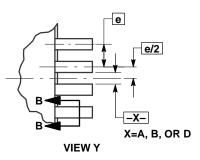

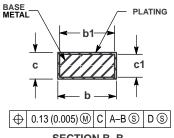

**SECTION B-B** 

- NOTES: 1. DIMENSIONING AND TOLERANCING PER ANSI Y14.5M, 1982. 2. DATUM PLANE -H- IS LOCATED AT BOTTOM OF LEAD
  - AND IS COINCIDENT WITH THE LEAD WHERE THE LEAD EXITS THE PLASTIC BODY AT THE BOTTOM OF THE PARTING LINE
- DATUMS –A–, –B– AND –D– TO BE DETERMINED AT DATUM PLANE –H–.
- 4.
- DATUM PLANE -H-. DIMENSIONS D AND E TO BE DETERMINED AT SEATING PLANE -C-. DIMENSIONS DI AND E1 DO NOT INCLUDE MOLD PROTRUSION. ALLOWABLE PROTRUSION IS 0.25 5. (0.010) PER SIDE. DIMENSIONS D1 AND B1 DO INCLUDE MOLD MISMATCH AND ARE DETERMINED
- AT DATUM PLANE –H–. 6. DIMENSION b DOES NOT INCLUDE DAMBAR PROTRUSION. DAMBAR PROTRUSION SHALL NOT CAUSE THE b DIMENSION TO EXCEED 0.45 (0.018).

	MILLIMETERS			
DIM	MIN	MAX		
Α		1.60		
A1	0.05	0.15		
A2	1.35	1.45		
b	0.22	0.38		
b1	0.22	0.33		
С	0.09	0.20		
c1	0.09	0.16		
D	22.00	BSC		
D1	20.00 BSC			
E	16.00 BSC			
E1	14.00 BSC			
е	0.65 BSC			
L	0.45	0.75		
L1	1.00			
L2	0.50	REF		
S	0.20			
R1	0.08			
R2	0.08 0.20			
θ	0° 7			
01	0 °			
θ2	11 ° 13 °			
θ3	11 °	13 °		

Mfax is a trademark of Motorola. Inc.

How to reach us:

USA/EUROPE/Locations Not Listed: Motorola Literature Distribution; P.O. Box 5405, Denver, Colorado, 80217. 1-303-675-2140 or 1-800-441-2447

Mfax™: RMFAX0@email.sps.mot.com - TOUCHTONE 1-602-244-6609 Motorola Fax Back System - US & Canada ONLY 1-800-774-1848 - http://sps.motorola.com/mfax/

 $\Diamond$ 

HOME PAGE: http://motorola.com/sps/

4-32-1 Nishi-Gotanda, Shagawa-ku, Tokyo, Japan. 03-5487-8488 ASIA/PACIFIC: Motorola Semiconductors H.K. Ltd.; 8B Tai Ping Industrial Park, 51 Ting Kok Road, Tai Po, N.T., Hong Kong. 852-26629298

JAPAN: Nippon Motorola Ltd.: SPD, Strategic Planning Office, 141,

CUSTOMER FOCUS CENTER: 1-800-521-6274



MCM69C232/D